

SERVING AEROSPACE FOR THREE GENERATIONS



TORQUE CONTROL TOOL CATALOG

MODULAR INSTALL SYSTEM











QUALITY BUILT IN

Aerospace demands for ultra-high performance materials led to the development of the C-type 18% nickel maraging tool steels. The strongest of this type of material is C-350 with a nominal ultimate tensile strength of 350 ksi or 350,000 pounds per square inch.

This material has higher strength and better wear properties than any material we have tested. ALL gears in Jiffy Air Tool attachments are made from this superior material.



You will find the same devotion to quality in all of our parts, housings made from A2, cover plates made from 1095 spring steel, bearing shafts made from E52100, and drive shafts made from chrome-moly tool steel. The limited space available for airframe assembly demands strong small tools. Superior materials combined with three generations of experience building tools for aerospace is represented in the torque controlled installation system in this catalog.

From design to manufacturing the people at Jiffy Air Tool always strive to deliver the best tools possible.





17 Degree Attachments

















Series I Sockets & Keys Page 53

Series 2 & 3 Sockets & Keys Page 56

Series 2 & 3 Sockets & Keys Page 56

L Type Attachments



Series I Sockets & Keys Page 53



Series 2 & 3 Sockets & Keys Page 56



Series 2 & 3 Sockets & Keys Page 56

Straight Attachments



Series 2 Straight Install Sockets & Keys Page 68



Series 3 Straight Install Sockets & Keys Page 72



Torque Control Motors for use with attachments

Straight Torque Control Motors (Small Castle Coupling) Pg.77

Offset Torque Control Motors (Small Castle Coupling) Pg.79







Offset Torque Control Motors (Big Castle Coupling) Pg.80







Torque Control Motors

Pg.81

Offset Screw Drivers

Drive: 1/4" Quick-Change
Uses generic 1/4" Hex Bits



Angle Nut Runners

Pg.82

Drive: 3/8" Square Uses generic 3/8" Sq. Drive Sockets





- Identify your fasteners type & diameter. Note the hex size of the nut & whether it is a six or twelve point nut.
- Identify if fastener pins are non-interference(loose) or interference fit. Interference fit pins can have their nut tightened without the need for a key control system. Non-interference fit pins require a "Key Control Assembly" to prevent the pin from spinning as the nut is torqued down.
- Identify & note the installed torque range of the fastener to be installed. When you go to select a tool, where possible, select a tool whose median torque is closest to your fasteners torque range.
- Determine what type of motor(straight or offset), attachment(17deg, L-type, or straight), & nose gear / socket setup would best fit into your work area. If the work area is extremely limited & tool fitment cannot be determined, please contact Jiffy for assistance.
- Next, determine the reach requirements to access the fastener site. Decide whether a 5 or 7 gear attachment and/or a short or long tube(L-type) is needed in order to access the fastener site. You may request a "New Tool Application Form" from Jiffy to help clarify.
- Now, choose the appropriate nose gear from the tables listed at the bottom of the attachment pages. The "socket driver" & "hex flush" nose gears can be used with or without a key control. "Hex thru" nose gears are not used with a key control and thus are typically used with interference-fit pins.
- **7** Assemble a complete tool order number.
 - I.) "Motor number-Attachment number-Nose gear number"
 Add a "U" to the attachment number if no key control assembly is required.
 Examples include:
 - A) A socket driver gear is ordered but no key system is required
 - B) A flush gear is ordered but no key system is required

The key system will automatically be deleted if you order:

- A) A hex thru gear
- B) A square drive gear
- 2.) Append accessory number(s).

Examples include:

 
- A) A socket (with no key control assembly)
- B) A socket accessory assembly (key control assembly, socket, and key)
- C) A flush gear & key (key control assembly and key to match flush nose gear)
- 3.) Specify the target torque for Jiffy to preset your tool selection to.

Ex. "Set Torque: 35-40 in-lb"

8 OPTIONAL STEP: Concerned that the tool may damage surrounding parts & surfaces in a limited access situation? Please see our vinyl cover catalog!





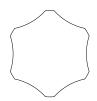







"X" OPTION HEX SHAPE:



  STANDARD HEX DEPTH:



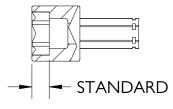

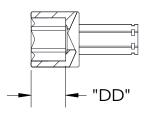

- GENERALLY NOT POSSIBLE ON 1/4 INCH LONG SOCKETS -

Most "Hex Thru" & "Hex Flush" nose gears & sockets will by default have the standard "Jiffy Hex" shape.

Most hex sockets, hex thru nose gears & hex flush nose gears can be equipped with "X" or "L" hex shape options.

Append the option code to the end of the nose gear or sockets part number. (Ex. "14445X")

Sockets can additionally be setup with hex depth options, but some options cannot fit on shorter length sockets due to hex depth requirement limitations.

Append the option code to the end of the socket part number. If the socket also has a hex shape option, append the hex shape code after the "DD" depth code. (Ex. "14445DDX")

See table below for limitations.

LEGEND

ALL OPTIONS AVAILABLE

NO DD, DDL, OR DDX


NO L, DD, DDL, OR DDX


NO DDL


TYPICAL SOCKET OPTION AVAILABILITY BY HEX SIZE &											
ITTIC											
	EXTENSION LENGTH										
LIEV CIZE			EX	TENSIO	n Leng	TH					
HEX SIZE	1/4	1/2	3/4	I	11/2	2	2 1/2	3+			
3/16											
7/32											
1/4											
9/32											
5/16											
11/32											
3/8											
7/16											
1/2											
9/16											
5/8											
11/16											
3/4											
13/16											
7/8											
15/16											
11/8											


KEY CONTROL ASSEMBLIES



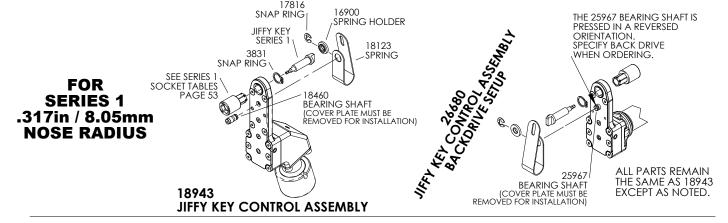

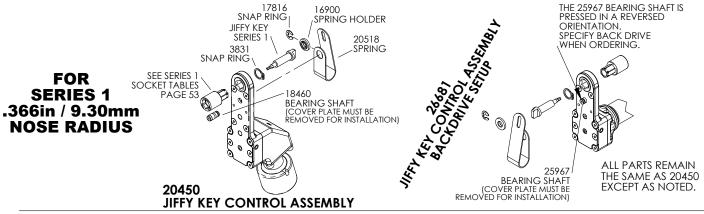

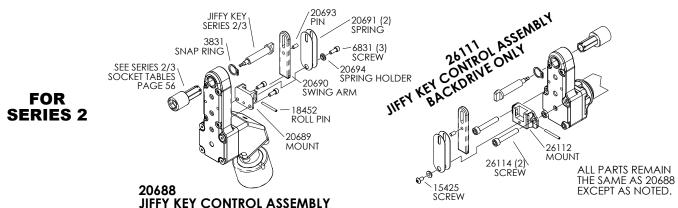


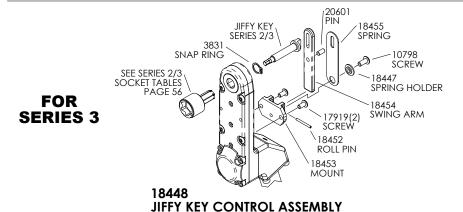

7-27 in-lbs / .8-3.0 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 380 RPM

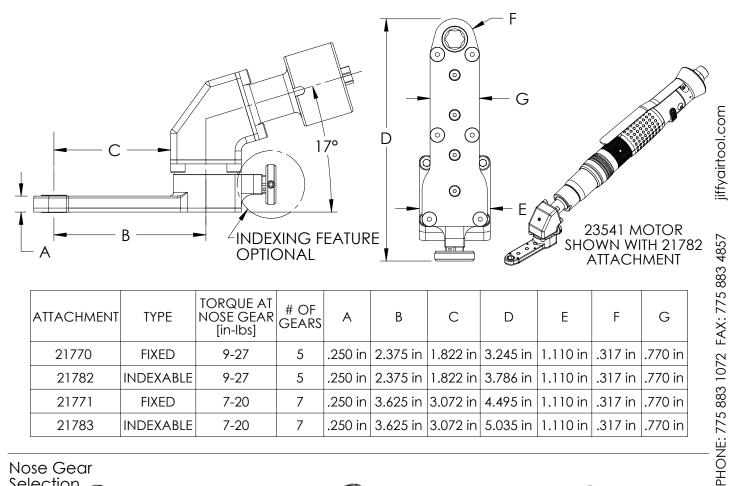

ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	А	В	С	D	Е	F	G
21770	FIXED	9-27	5	.250 in	2.375 in	1.822 in	3.245 in	1.110 in	.317 in	.770 in
21782	INDEXABLE	9-27	5	.250 in	2.375 in	1.822 in	3.786 in	1.110 in	.317 in	.770 in
21771	FIXED	7-20	7	.250 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
21783	INDEXABLE	7-20	7	.250 in	3.625 in	3.072 in	5.035 in	1.110 in	.317 in	.770 in

 Nose Gear Selection

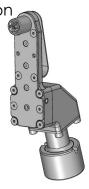


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 12465	9/32	SOCKET DRIVER
13186	1/4	SQ DRIVE MALE

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO

 
KEY CONTROL IS REQUIRED

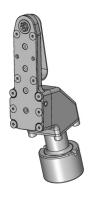

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NC	SIZ	ZΕ	TYPE			
* 20400	7/32		HEX FLUSH			
* 20069		1/4		HEX FLUSH		
* 20402		9/32		HE	X FLUSH	
JIFF'	/ TO	RQU	E KE	YS FLU	SH	
KEY HEX 1/		16	5/64		3/32	
PART NO. 18		937	18	938	18939	

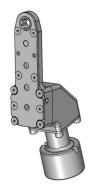 


HEX THRU

SIZE	TYPE		
7/32	HEX THRU		
1/4	HEX THRU		
9/32	HEX THRU		
	7/32		

15-48 in-lbs / 1.7-5.4 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 250 RPM

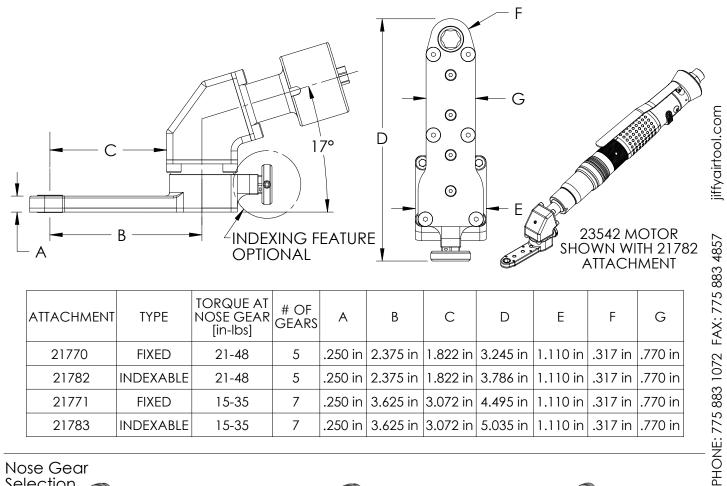

ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	А	В	С	D	Е	F	G
21770	FIXED	21-48	5	.250 in	2.375 in	1.822 in	3.245 in	1.110 in	.317 in	.770 in
21782	INDEXABLE	21-48	5	.250 in	2.375 in	1.822 in	3.786 in	1.110 in	.317 in	.770 in
21771	FIXED	15-35	7	.250 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
21783	INDEXABLE	15-35	7	.250 in	3.625 in	3.072 in	5.035 in	1.110 in	.317 in	.770 in

 
Nose Gear Selection

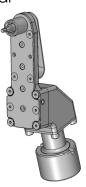

The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 12465	9/32	SOCKET DRIVER
13186	1/4	SQ DRIVE MALE

 
* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

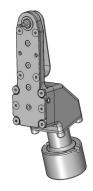

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NC	SIZ	ZΕ	TYPE				
* 20400		7/32		HEX FLUSH			
* 20069		1/4		HEX FLUSH			
* 20402		9/	32	HE	X FLUSH		
JIFFY TO		RQU	E KE	YS FLU	SH		
KEY HEX 1/		16	5/64		3/32		
PART NO. 189		937	18	938	18939		

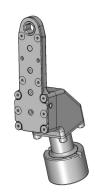 


HEX THRU

PART NO.	SIZE	TYPE
12657	7/32	HEX THRU
13187	1/4	HEX THRU
13188	9/32	HEX THRU

31-60 in-lbs / 3.5-6.8 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 300 RPM

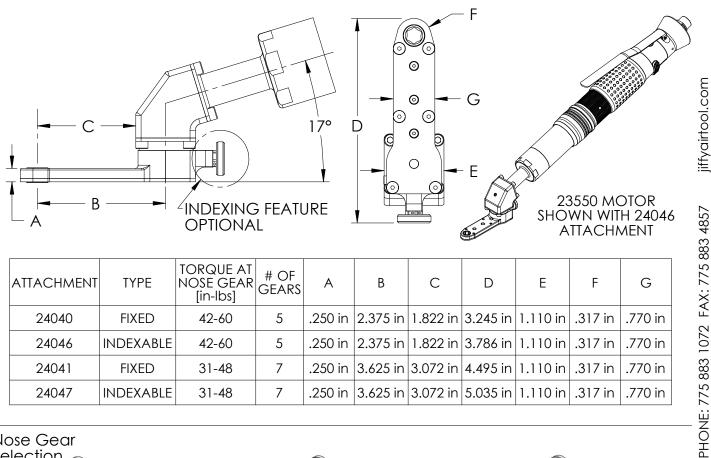

ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	E	F	G
24040	FIXED	42-60	5	.250 in	2.375 in	1.822 in	3.245 in	1.110 in	.317 in	.770 in
24046	INDEXABLE	42-60	5	.250 in	2.375 in	1.822 in	3.786 in	1.110 in	.317 in	.770 in
24041	FIXED	31-48	7	.250 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
24047	INDEXABLE	31-48	7	.250 in	3.625 in	3.072 in	5.035 in	1.110 in	.317 in	.770 in

 Nose Gear Selection

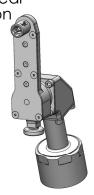


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 12465	9/32	SOCKET DRIVER
13186	1/4	SQ DRIVE MALE

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS

 
ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

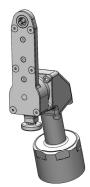

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO.		SIZ	ZE	TYPE		
*	× 20400		7/	32	HEX FLUSH	
*	× 20069		1/4		HEX FLUSH	
*	× 20402		9/32		HE	X FLUSH
JIFFY TO			RQU	E KE	YS FLU	SH
KE	KEY HEX 1/		1/16		/64	3/32
РА	PART NO. 189		937	18	938	18939

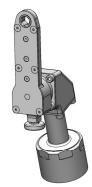 


HEX THRU

PART NO.	SIZE	TYPE
12657	7/32	HEX THRU
13187	1/4	HEX THRU
13188	9/32	HEX THRU

44-60 in-lbs / 5.0-6.8 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 210 RPM

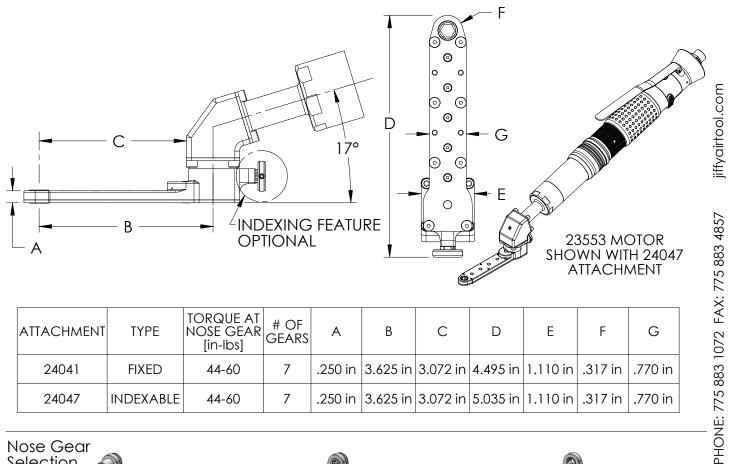

ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	E	F	G
24041	FIXED	44-60	7	.250 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
24047	INDEXABLE	44-60	7	.250 in	3.625 in	3.072 in	5.035 in	1.110 in	.317 in	.770 in

 
Nose Gear Selection

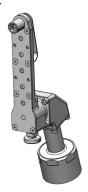

The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

o, 110, 0,0101								
PART NO.	SIZE	TYPE						
* 12465	9/32	SOCKET DRIVER						
13186	1/4	SQ DRIVE MALE						

 
* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

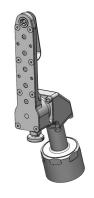

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NC	SIZ	ZΕ	TYPE						
* 20400	7/32		HEX FLUSH						
* 20069	1,	4	HE	X FLUSH					
* 20402	* 20402		9/32		X FLUSH				
JIFF	/ TO	RQU	E KE	YS FLU	SH				
KEY HEX	1/	16	5,	/64	3/32				
PART NO. 18		937	18	938	18939				

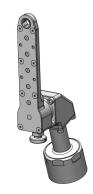 


HEX THRU

PART NO.	SIZE	TYPE
12657	7/32	HEX THRU
13187	1/4	HEX THRU
13188	9/32	HEX THRU

7-27 in-lbs / .8-3.0 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 380 RPM

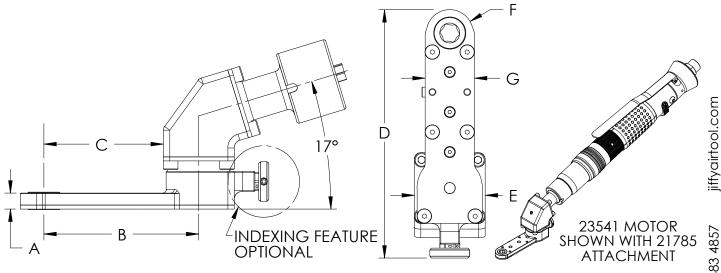

ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
21773	FIXED	9-27	5	.250 in	2.422 in	1.869 in	3.341 in	1.110 in	.366 in	.770 in
21785	INDEXABLE	9-27	5	.250 in	2.422 in	1.869 in	3.882 in	1.110 in	.366 in	.770 in
21774	FIXED	7-20	7	.250 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
21786	INDEXABLE	7-20	7	.250 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 Nose Gear Selection

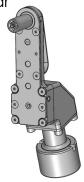


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE			
* 20515	9/32	SOCKET DRIVER			
20516	1/4	SQ DRIVE MALE			

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS

 
ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

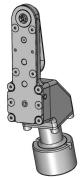

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART N	SIZ	ZΕ		TYPE	
* 2040	3	7/:	32	HE	X FLUSH
* 2040	1/	′ 4	HEX FLUSH		
* 2040	9/	9/32		X FLUSH	
* 2040	6	5/16		HEX FLUSH	
* 2040	7	11/32		HEX FLUSH	
JIF	RQU	E KE	YS FLU	SH	
KEY HEX	(1,	/16	5,	/64	3/32
PART NC). 18	937	18	938	18939

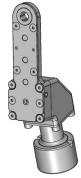 

HEX THRU

The hex listed runs completely through the nose gear. No key system is used.


PART NO.	SIZE	TYPE
20477	7/32	HEX THRU
20478	1/4	HEX THRU
15466	9/32	HEX THRU
15467	5/16	HEX THRU
15468	11/32	HEX THRU

12

15-48 in-lbs / 1.7-5.4 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 250 RPM

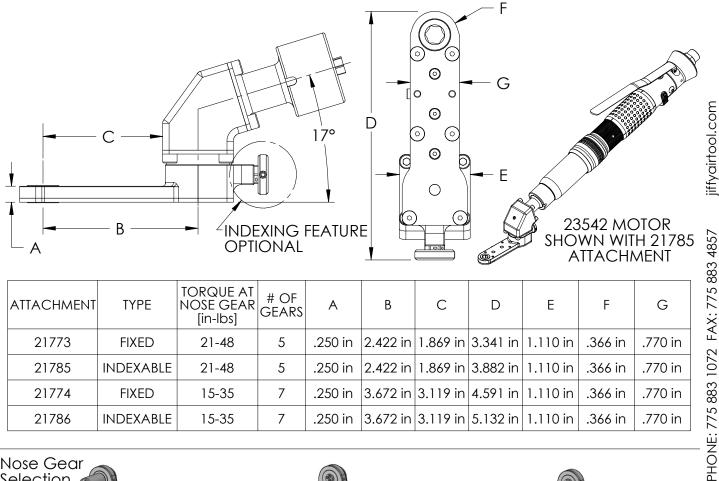

A	ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
	21773	FIXED	21-48	5	.250 in	2.422 in	1.869 in	3.341 in	1.110 in	.366 in	.770 in
	21785	INDEXABLE	21-48	5	.250 in	2.422 in	1.869 in	3.882 in	1.110 in	.366 in	.770 in
	21774	FIXED	15-35	7	.250 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
	21786	INDEXABLE	15-35	7	.250 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 Nose Gear Selection

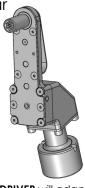


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 20515	9/32	SOCKET DRIVER
20516	1/4	SQ DRIVE MALE

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS

 
ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

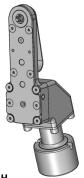

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO	SIZ	ZΕ		TYPE	
* 20403	7/:	32	HE	X FLUSH	
* 20404	1/	′ 4	HEX FLUSH		
* 20405	9/:	32	HEX FLUSH		
* 20406		5/16 HEX FL		X FLUSH	
* 20407		11/32		HEX FLUSH	
JIFF	RQU	E KE	YS FLU	SH	
KEY HEX	HEX 1/		/16 5/		3/32
PART NO. 189		937	18	938	18939

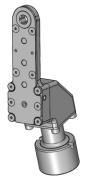 


HEX THRU

PART NO.	SIZE	TYPE
20477	7/32	HEX THRU
20478	1/4	HEX THRU
15466	9/32	HEX THRU
15467	5/16	HEX THRU
15468	11/32	HEX THRU
	20477 20478 15466 15467	20477 7/32 20478 1/4 15466 9/32 15467 5/16

31-60 in-lbs / 3.5-6.8 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 300 RPM

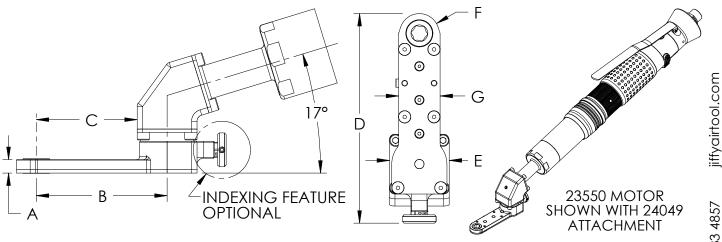

A	TTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
	24043	FIXED	42-60	5	.250 in	2.422 in	1.869 in	3.341 in	1.110 in	.366 in	.770 in
	24049	INDEXABLE	42-60	5	.250 in	2.422 in	1.869 in	3.882 in	1.110 in	.366 in	.770 in
	24044	FIXED	31-48	7	.250 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
	24050	INDEXABLE	31-48	7	.250 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 Nose Gear Selection

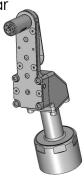


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 20515	9/32	SOCKET DRIVER
20516	1/4	SQ DRIVE MALE

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS

 
ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

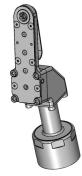

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO	SIZ	ZΕ		TYPE			
* 20403	7/:	32	HE	X FLUSH			
* 20404	1/4 HEX FLI			X FLUSH			
* 20405	9/:	32	HE	X FLUSH			
* 20406		5/16		HE	HEX FLUSH		
* 20407		11/32		HEX FLUSH			
JIFFY	RQU	E KE	YS FLU	SH			
KEY HEX	1/	16	16 5/		3/32		
PART NO.	18	937	18	938	18939		

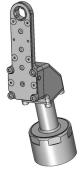 


HEX THRU

PART NO.	SIZE	TYPE
20477	7/32	HEX THRU
20478	1/4	HEX THRU
15466	9/32	HEX THRU
15467	5/16	HEX THRU
15468	11/32	HEX THRU

44-60 in-lbs / 5.0-6.8 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 210 RPM

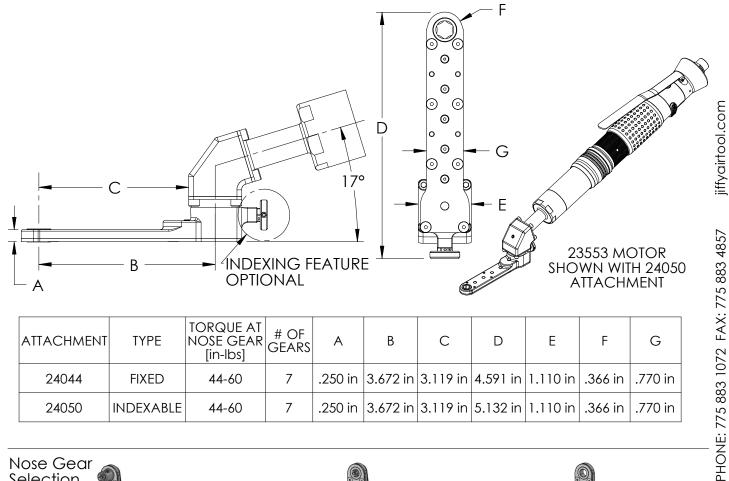

A	ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
	24044	FIXED	44-60	7	.250 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
	24050	INDEXABLE	44-60	7	.250 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 
Nose Gear Selection

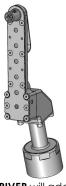

The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 20515	9/32	SOCKET DRIVER
20516	1/4	SQ DRIVE MALE

 
* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

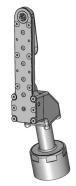

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO		SIZ	ZΕ		TYPE
* 20403		7/:	32	HE	X FLUSH
* 20404		1/	' 4	HE	X FLUSH
* 20405		9/:	32	HEX FLUSH	
* 20406		5/16 HEX FLI		X FLUSH	
* 20407		11/32		HEX FLUSH	
JIFFY	' TOR	QU	E KE	YS FLU	SH
KEY HEX 1/		16 5,		/64	3/32
PART NO. 189		37	18	938	18939

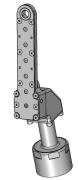 


HEX THRU

PART NO.	SIZE	TYPE
20477	7/32	HEX THRU
20478	1/4	HEX THRU
15466	9/32	HEX THRU
15467	5/16	HEX THRU
15468	11/32	HEX THRU

7-27 in-lbs / .8-3.0 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 380 RPM

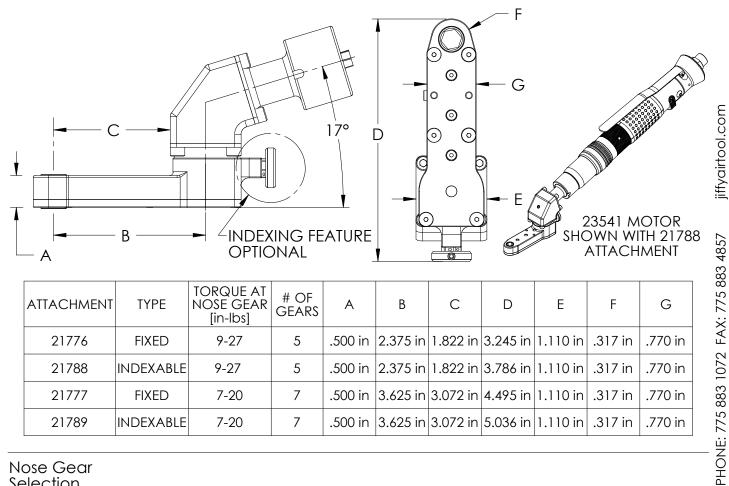


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
21776	FIXED	9-27	5	.500 in	2.375 in	1.822 in	3.245 in	1.110 in	.317 in	.770 in
21788	INDEXABLE	9-27	5	.500 in	2.375 in	1.822 in	3.786 in	1.110 in	.317 in	.770 in
21777	FIXED	7-20	7	.500 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
21789	INDEXABLE	7-20	7	.500 in	3.625 in	3.072 in	5.036 in	1.110 in	.317 in	.770 in

 Nose Gear Selection

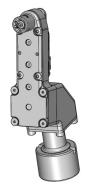

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

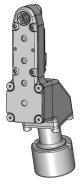 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH							
KEY HE	X 1/	16 5/	64 3/3	32 1/8	5/32	2 3/16	
PART N	O. 183	10 183	311 183	12 183	13 1894	0 18941	

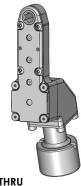 


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU

15-48 in-lbs / 1.7-5.4 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 250 RPM

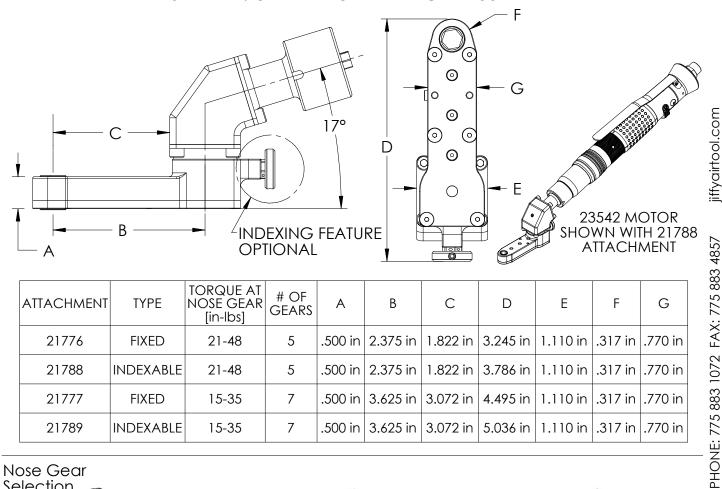


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
21776	FIXED	21-48	5	.500 in	2.375 in	1.822 in	3.245 in	1.110 in	.317 in	.770 in
21788	INDEXABLE	21-48	5	.500 in	2.375 in	1.822 in	3.786 in	1.110 in	.317 in	.770 in
21777	FIXED	15-35	7	.500 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
21789	INDEXABLE	15-35	7	.500 in	3.625 in	3.072 in	5.036 in	1.110 in	.317 in	.770 in

 Nose Gear Selection

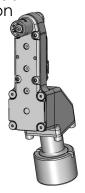

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

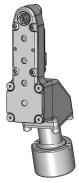 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

	JIFFY TORQUE KEYS FLUSH							
KEY	HEX	1/16	5/64	3/32	1/8	5/32	3/16	
PART	NO.	18310	18311	18312	18313	18940	18941	

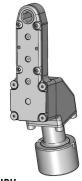 


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 300 RPM

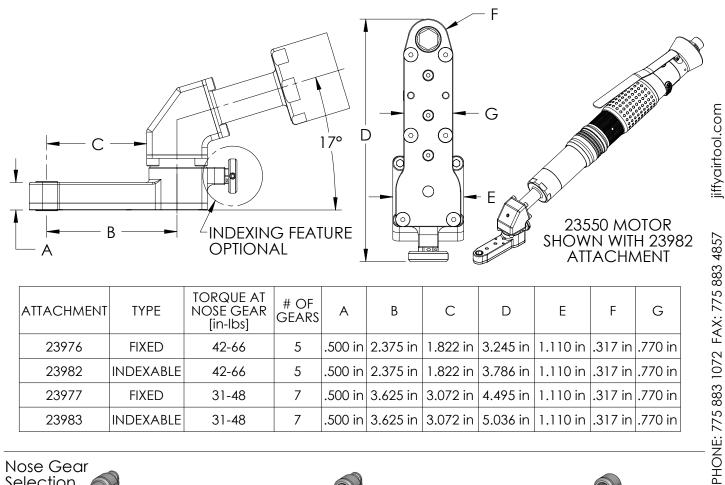


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
23976	FIXED	42-66	5	.500 in	2.375 in	1.822 in	3.245 in	1.110 in	.317 in	.770 in
23982	INDEXABLE	42-66	5	.500 in	2.375 in	1.822 in	3.786 in	1.110 in	.317 in	.770 in
23977	FIXED	31-48	7	.500 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
23983	INDEXABLE	31-48	7	.500 in	3.625 in	3.072 in	5.036 in	1.110 in	.317 in	.770 in

 Nose Gear Selection

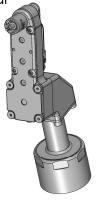

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

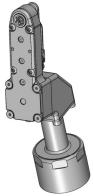 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH
	12469 12470	12469 7/32 12470 1/4

JIFFY TORQUE KEYS FLUSH							
KEY H	EX	1/16	5/64	3/32	1/8	5/32	3/16
PART N	10.	18310	18311	18312	18313	18940	18941

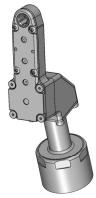 


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU

44-108 in-lbs / 5.0-12.2 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 210 RPM

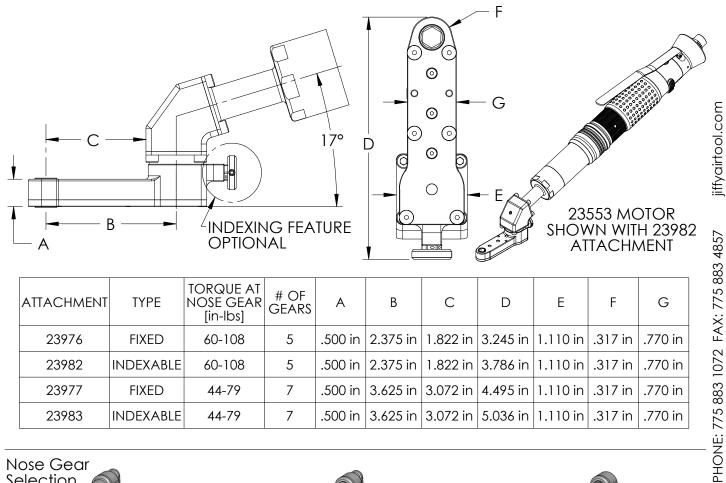


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
23976	FIXED	60-108	5	.500 in	2.375 in	1.822 in	3.245 in	1.110 in	.317 in	.770 in
23982	INDEXABLE	60-108	5	.500 in	2.375 in	1.822 in	3.786 in	1.110 in	.317 in	.770 in
23977	FIXED	44-79	7	.500 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
23983	INDEXABLE	44-79	7	.500 in	3.625 in	3.072 in	5.036 in	1.110 in	.317 in	.770 in

 Nose Gear Selection

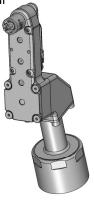

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

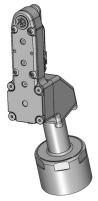 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

	JIFFY TORQUE KEYS FLUSH							
KEY F	HEX	1/16	5/64	3/32	1/8	5/32	3/16	
PART	NO.	18310	18311	18312	18313	18940	18941	

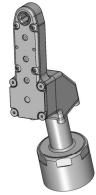 


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU

73-120 in-lbs / 8.2-13.6 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 160 RPM

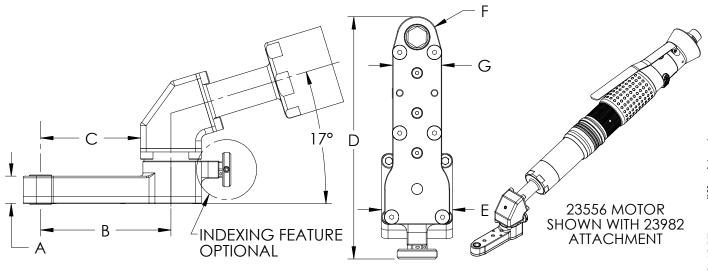


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	E	F	G
23976	FIXED	99-120	5	.500 in	2.375 in	1.822 in	3.245 in	1.110 in	.317 in	.770 in
23982	INDEXABLE	99-120	5	.500 in	2.375 in	1.822 in	3.786 in	1.110 in	.317 in	.770 in
23977	FIXED	73-120	7	.500 in	3.625 in	3.072 in	4.495 in	1.110 in	.317 in	.770 in
23983	INDEXABLE	73-120	7	.500 in	3.625 in	3.072 in	5.036 in	1.110 in	.317 in	.770 in

 Nose Gear Selection

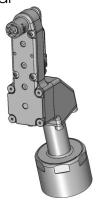

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

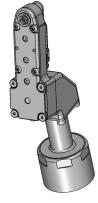 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

	127/1			702	TILA	LOGIT	
JIFFY TORQUE KEYS FLUSH							
KEY	HEX	1/16	5/64	3/32	1/8	5/32	3/16
PART	NO.	18310	18311	18312	18313	18940	18941

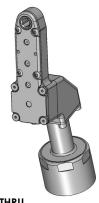 


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU
12477	9/32	HEX THRU

7-27 in-lbs / .8-3.0 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 380 RPM

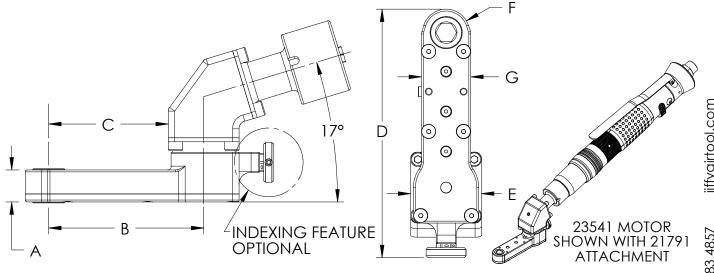


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	А	В	С	D	Е	F	G
21779	FIXED	9-27	5	.500 in	2.422 in	1.869 in	3.342 in	1.110 in	.366 in	.770 in
21791	INDEXABLE	9-27	5	.500 in	2.422 in	1.869 in	3.882 in	1.110 in	.366 in	.770 in
21780	FIXED	7-20	7	.500 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
21792	INDEXABLE	7-20	7	.500 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 Nose Gear Selection

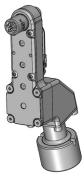

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

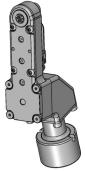 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH							
	KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16
	PART NO.	18310	18311	18312	18313	18940	18941

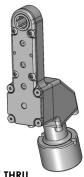 


HEX THRU

PART NO.	SIZE	TYPE
15379	7/32	HEX THRU
15380	1/4	HEX THRU
15381	9/32	HEX THRU
15337	5/16	HEX THRU
15461	11/32	HEX THRU

15-48 in-lbs / 1.7-5.4 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 250 RPM

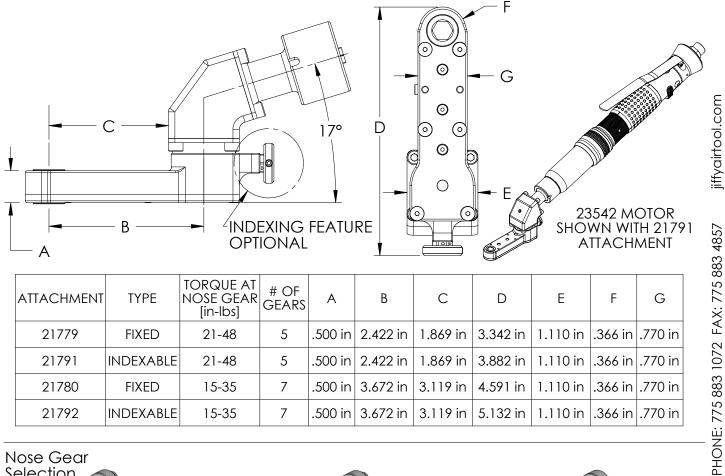


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	А	В	С	D	E	F	G
21779	FIXED	21-48	5	.500 in	2.422 in	1.869 in	3.342 in	1.110 in	.366 in	.770 in
21791	INDEXABLE	21-48	5	.500 in	2.422 in	1.869 in	3.882 in	1.110 in	.366 in	.770 in
21780	FIXED	15-35	7	.500 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
21792	INDEXABLE	15-35	7	.500 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 Nose Gear Selection

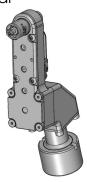

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

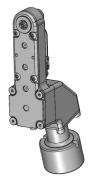 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH							
	KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16
	PART NO.	18310	18311	18312	18313	18940	18941

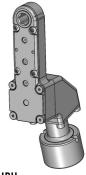 


HEX THRU

PART NO.	SIZE	TYPE
15379	7/32	HEX THRU
15380	1/4	HEX THRU
15381	9/32	HEX THRU
15337	5/16	HEX THRU
15461	11/32	HEX THRU

31-66 in-lbs / 3.5-7.5 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 300 RPM

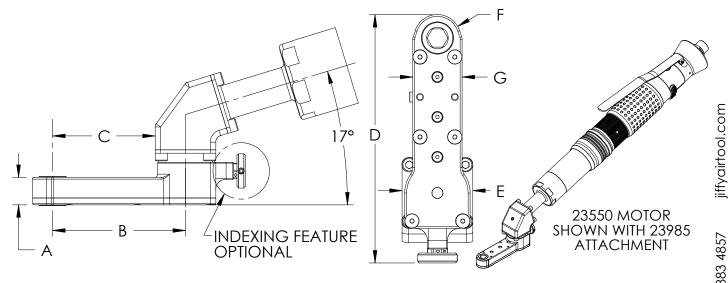


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F	G
23979	FIXED	42-66	5	.500 in	2.422 in	1.869 in	3.342 in	1.110 in	.366 in	.770 in
23985	INDEXABLE	42-66	5	.500 in	2.422 in	1.869 in	3.882 in	1.110 in	.366 in	.770 in
23980	FIXED	31-48	7	.500 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
23986	INDEXABLE	31-48	7	.500 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 Nose Gear Selection

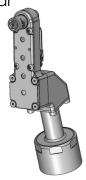

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

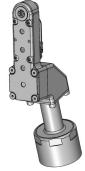 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

	JIFFY	S FLUSH	1			
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16
PART NO.	18310	18311	18312	18313	18940	18941

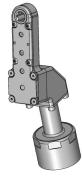 


HEX THRU

PART NO.	SIZE	TYPE		
15379	7/32	HEX THRU		
15380	1/4	HEX THRU		
15381	9/32	HEX THRU		
15337	5/16	HEX THRU		
15461	11/32	HEX THRU		
	-, -			

44-108 in-lbs / 5.0-12.2 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 210 RPM

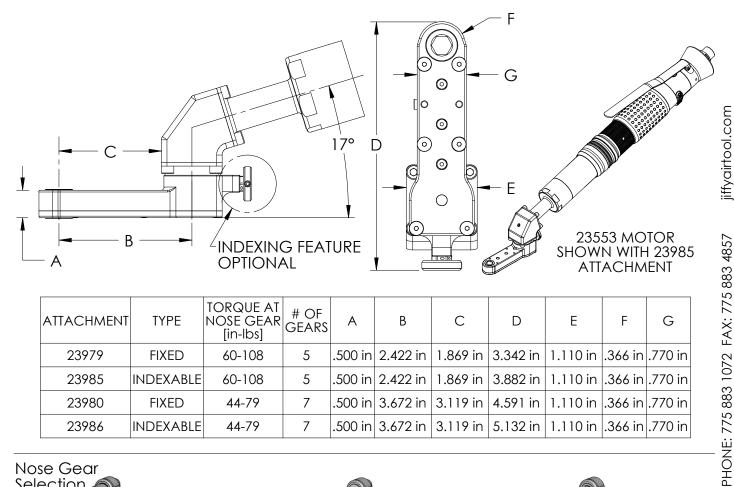


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	E	F	G
23979	FIXED	60-108	5	.500 in	2.422 in	1.869 in	3.342 in	1.110 in	.366 in	.770 in
23985	INDEXABLE	60-108	5	.500 in	2.422 in	1.869 in	3.882 in	1.110 in	.366 in	.770 in
23980	FIXED	44-79	7	.500 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
23986	INDEXABLE	44-79	7	.500 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 Nose Gear Selection

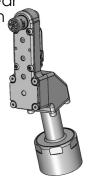

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

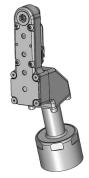 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

	JIFFY TORQUE KEYS FLUSH									
	KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16			
PART NO. 18310			18311	18312	18313	18940	18941			

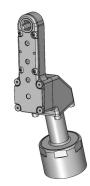 


HEX THRU

PART NO.	SIZE	TYPE		
15379	7/32	HEX THRU		
15380	1/4	HEX THRU		
15381	9/32	HEX THRU		
15337	5/16	HEX THRU		
15461	11/32	HEX THRU		

73-120 in-lbs / 8.2-13.6 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 160 RPM

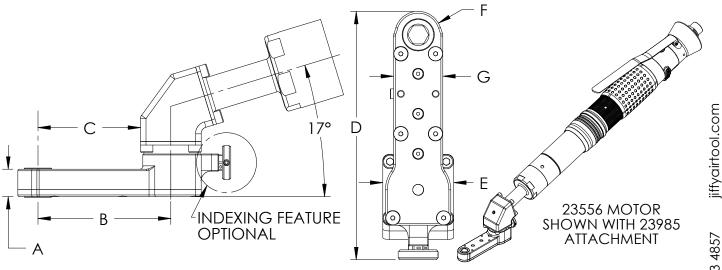


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	А	В	С	D	Е	F	G
23979	FIXED	99-120	5	.500 in	2.422 in	1.869 in	3.342 in	1.110 in	.366 in	.770 in
23985	INDEXABLE	99-120	5	.500 in	2.422 in	1.869 in	3.882 in	1.110 in	.366 in	.770 in
23980	FIXED	73-120	7	.500 in	3.672 in	3.119 in	4.591 in	1.110 in	.366 in	.770 in
23986	INDEXABLE	73-120	7	.500 in	3.672 in	3.119 in	5.132 in	1.110 in	.366 in	.770 in

 Nose Gear Selection

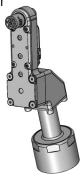

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

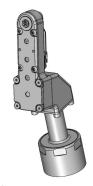 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

	JIFFY TORQUE KEYS FLUSH									
	KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16			
PART NO. 18310			18311	18312	18313	18940	18941			

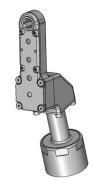 

HEX THRU


PART NO.	SIZE	TYPE
15379	7/32	HEX THRU
15380	1/4	HEX THRU
15381	9/32	HEX THRU
15337	5/16	HEX THRU
15461	11/32	HEX THRU

17 DEG RAT

73-160 in-lbs / 8.2-18.1 Nm



17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .385 inch / 9.8 mm NOSE RADIUS - 160 RPM

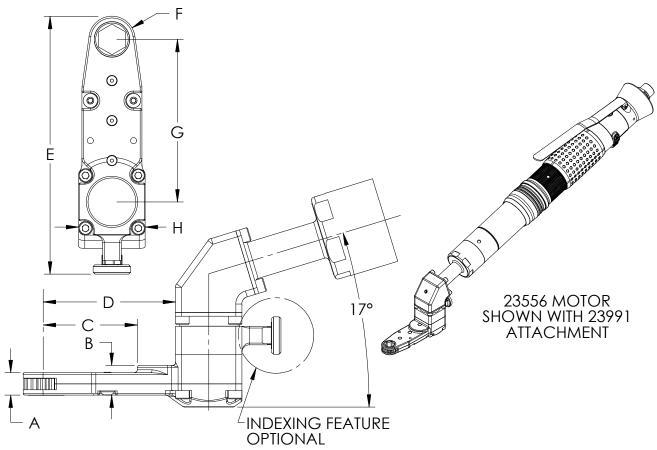


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	E	F	G	Н
23988	FIXED	99-160	5	.374 in	.495 in	1.521 in	2.155 in	3.646 in	.385 in	2.708 in	1.110 in
23991	INDEXABLE	99-160	5	.374 in	.495 in	1.521 in	2.155 in	4.297 in	.385 in	2.708 in	1.110 in
23989	FIXED	73-132	7	.374 in	.495 in	1.521 in	3.489 in	4.980 in	.385 in	4.042 in	1.110 in
23992	INDEXABLE	73-132	7	.374 in	.495 in	1.521 in	3.489 in	5.631 in	.385 in	4.042 in	1.110 in

Nose Gear Selection

HEX THRU


PART NO.	SIZE	TYPE
18082	3/16	HEX THRU
18081	7/32	HEX THRU
18080	1/4	HEX THRU
18079	9/32	HEX THRU
18078	5/16	HEX THRU
18077	11/32	HEX THRU
18076	3/8	HEX THRU
17929	7/16	HEX THRU

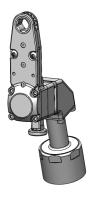 

44-108 in-lbs / 5.0-12.2 Nm




17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .500 inch / 12.7 mm NOSE RADIUS - 210 RPM

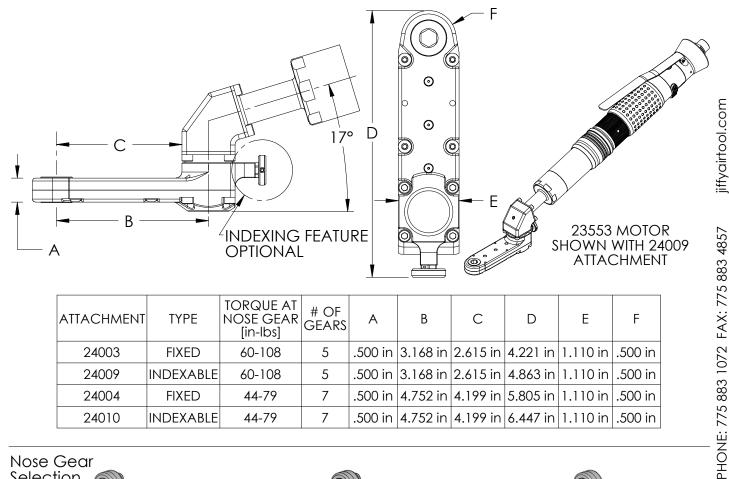


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F
24003	FIXED	60-108	5	.500 in	3.168 in	2.615 in	4.221 in	1.110 in	.500 in
24009	INDEXABLE	60-108	5	.500 in	3.168 in	2.615 in	4.863 in	1.110 in	.500 in
24004	FIXED	44-79	7	.500 in	4.752 in	4.199 in	5.805 in	1.110 in	.500 in
24010	INDEXABLE	44-79	7	.500 in	4.752 in	4.199 in	6.447 in	1.110 in	.500 in

 Nose Gear Selection

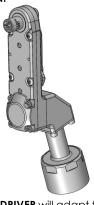

The **SOCKET DRIVER** will adapt the attachment to accept Series 3 Sockets.

PART NO.	SIZE	TYPE
18449	9/32	SOCKET DRIVER
15905	1/4	SQ DRIVE MALE
20748	3/8	SQ DRIVE MALE

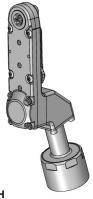 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 3 table.

	PART NO.	SIZE	TYPE		
	16038	5/16	HEX FLUSH		
	15891	7/16	HEX FLUSH		
15889		11/32	HEX FLUSH		
	15890	3/8	HEX FLUSH		

JIFFY TORQUE KEYS FLUSH										
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16				
PART NO.	18310	18311	18312	18313	18940	18941				

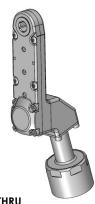 

HEX THRU


PART NO.	SIZE	TYPE
16039	5/16	HEX THRU
15892	11/32	HEX THRU
15893	3/8	HEX THRU
15894	7/16	HEX THRU

73-180 in-lbs / 8.2-20.3 Nm




jiffyairtool.com

17 DEG TORQUE TOOLS FOR TORQUE NUT APPLICATIONS .500 inch / 12.7 mm NOSE RADIUS - 160 RPM

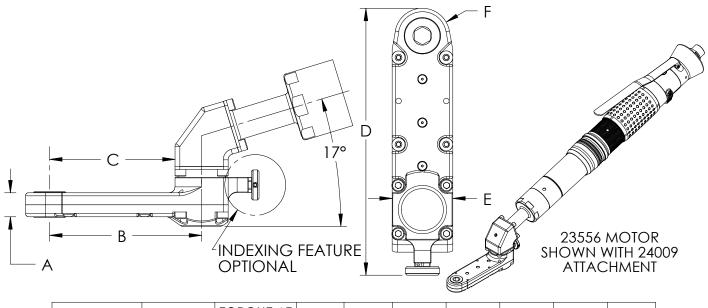


ATTACHMENT	TYPE	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	Α	В	С	D	Е	F
24003	FIXED	99-180	5	.500 in	3.168 in	2.615 in	4.221 in	1.110 in	.500 in
24009	INDEXABLE	99-180	5	.500 in	3.168 in	2.615 in	4.863 in	1.110 in	.500 in
24004	FIXED	73-132	7	.500 in	4.752 in	4.199 in	5.805 in	1.110 in	.500 in
24010	INDEXABLE	73-132	7	.500 in	4.752 in	4.199 in	6.447 in	1.110 in	.500 in

 Nose Gear Selection

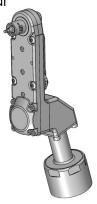

The **SOCKET DRIVER** will adapt the attachment to accept Series 3 Sockets.

PART NO.	SIZE	TYPE
18449	9/32	SOCKET DRIVER
15905	1/4	SQ DRIVE MALE
20748	3/8	SQ DRIVE MALE

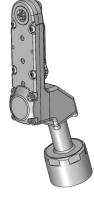 


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 3 table.

	PART NO.	SIZE	TYPE		
	16038	5/16	HEX FLUSH		
	15891	7/16	HEX FLUSH		
15889		11/32	HEX FLUSH		
	15890	3/8	HEX FLUSH		

JIFFY TORQUE KEYS FLUSH										
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16				
PART NO.	18310	18311	18312	18313	18940	18941				

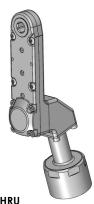 


HEX THRU

PART NO.	SIZE	TYPE
16039	5/16	HEX THRU
15892	11/32	HEX THRU
15893	3/8	HEX THRU
15894	7/16	HEX THRU

8-31 in-lbs / .9-3.5 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 250 RPM

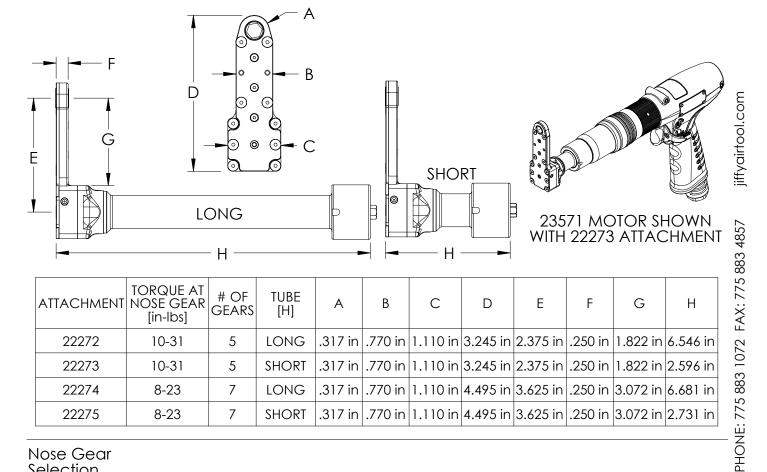

ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
22272	10-31	5	LONG	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.250 in	1.822 in	6.546 in
22273	10-31	5	SHORT	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.250 in	1.822 in	2.596 in
22274	8-23	7	LONG	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.250 in	3.072 in	6.681 in
22275	8-23	7	SHORT	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.250 in	3.072 in	2.731 in

Nose Gear Selection

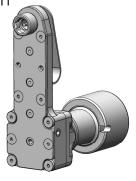


Н

The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 12465	9/32	SOCKET DRIVER
13186	1/4	SQ DRIVE MALE


* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

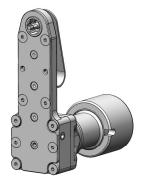

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO.			SIZ	ZΕ	TYPE			
*	* 20400			32	HEX FLUSH			
*	* 20069			1/4		X FLUSH		
*	* 20402			32	HEX FLUSH			
	JIFF	/ TO	RQU	E KE	/S FLU	SH		
KEY HEX 1/		16	5/64		3/32			
PAR	T NO.	18	937	18	938	18939		

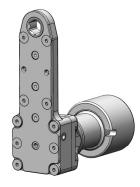


HEX THRU

PART NO.	SIZE	TYPE
12657	7/32	HEX THRU
13187	1/4	HEX THRU
13188	9/32	HEX THRU

18-54 in-lbs / 2.0-6.1 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 250 RPM

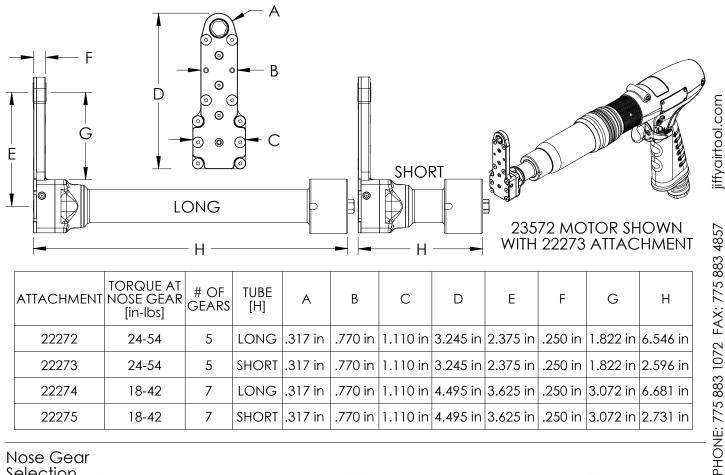

ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
22272	24-54	5	LONG	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.250 in	1.822 in	6.546 in
22273	24-54	5	SHORT	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.250 in	1.822 in	2.596 in
22274	18-42	7	LONG	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.250 in	3.072 in	6.681 in
22275	18-42	7	SHORT	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.250 in	3.072 in	2.731 in


Nose Gear Selection

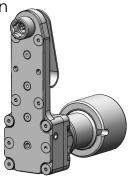

The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE		
* 12465	9/32	SOCKET DRIVER		
13186	1/4	SQ DRIVE MALE		


* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

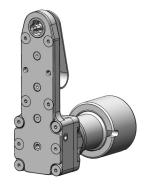

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO.			SIZ	ZE	TYPE				
*	* 20400			32	HEX FLUSH				
*	* 20069			1/4		X FLUSH			
*	* 20402			32	HE	X FLUSH			
	JIFF'	Y TO	RQU	E KE	YS FLU	SH			
KEY HEX 1/		16	5/64		3/32				
PAR	RT NO.	18	937	18	938	18939			

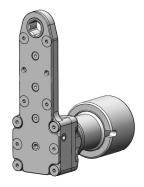


HEX THRU

PART NO.	SIZE	TYPE
12657	7/32	HEX THRU
13187	1/4	HEX THRU
13188	9/32	HEX THRU

9-34 in-lbs / 1.0-3.8 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 250 RPM FOR BACKDRIVE APPLICATION

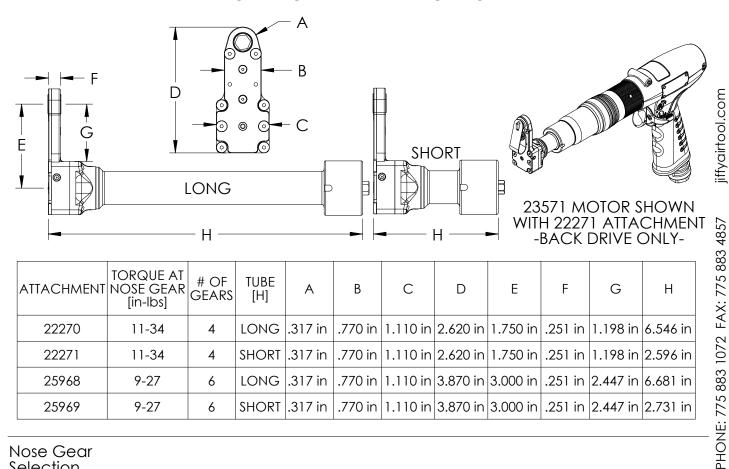

ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	Α	В	С	D	Е	F	G	Н
22270	11-34	4	LONG	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.251 in	1.198 in	6.546 in
22271	11-34	4	SHORT	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.251 in	1.198 in	2.596 in
25968	9-27	6	LONG	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.251 in	2.447 in	6.681 in
25969	9-27	6	SHORT	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.251 in	2.447 in	2.731 in

Nose Gear Selection




The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

	•	
PART NO.	SIZE	TYPE
* 12465	9/32	SOCKET DRIVER
13186	1/4	SQ DRIVE MALE

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS


ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

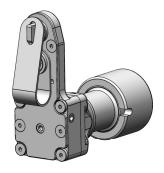

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO.			SIZ	ZE	TYPE			
* 2	* 20400			32	HEX FLUSH			
* 2	* 20069			1/4		HEX FLUSH		
* 2	* 20402		9/32		HE	X FLUSH		
	JIFF'	Y TO	RQU	E KE	YS FLU	SH		
KEY HEX 1/		16	5/64		3/32			
PART	NO.	18	937	18	938	18939		

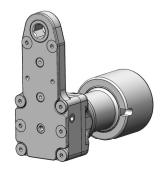


HEX THRU

PART NO.	SIZE	TYPE
12657	7/32	HEX THRU
13187	1/4	HEX THRU
13188	9/32	HEX THRU

21-61 in-lbs / 2.4-6.9 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 250 RPM FOR BACKDRIVE APPLICATION

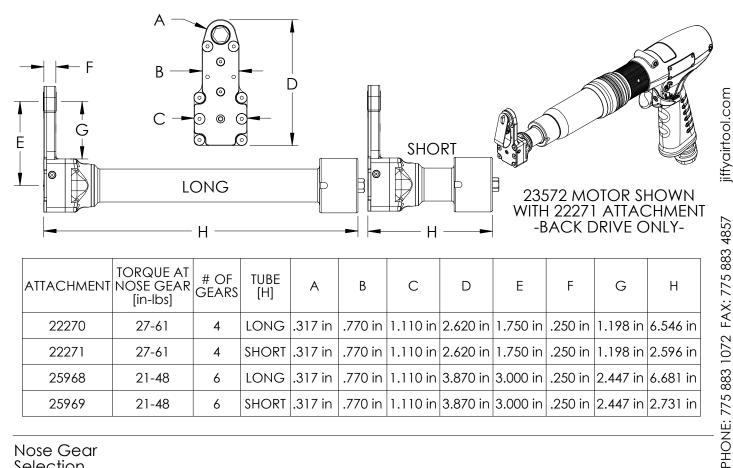

ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
22270	27-61	4	LONG	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.250 in	1.198 in	6.546 in
22271	27-61	4	SHORT	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.250 in	1.198 in	2.596 in
25968	21-48	6	LONG	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.250 in	2.447 in	6.681 in
25969	21-48	6	SHORT	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.250 in	2.447 in	2.731 in

Nose Gear Selection



The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 12465	9/32	SOCKET DRIVER
13186	1/4	SQ DRIVE MALE


* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED



HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

P	PART NO.		SIZE		TYPE		
*	* 20400		7/32		HEX FLUSH		
*	* 20069		1/4		HEX FLUSH		
*	* 20402		9/32		HEX FLUSH		
	JIFFY TORQUE KEYS FLUSH						
KEY	Y HEX	1/16		5,	/64	3/32	
PAR	RT NO.	18937		18938		18939	

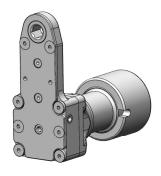


HEX THRU


PART NO.	SIZE	TYPE
12657	7/32	HEX THRU
13187	1/4	HEX THRU
13188	9/32	HEX THRU

8-31 in-lbs / .9-3.5 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 250 RPM

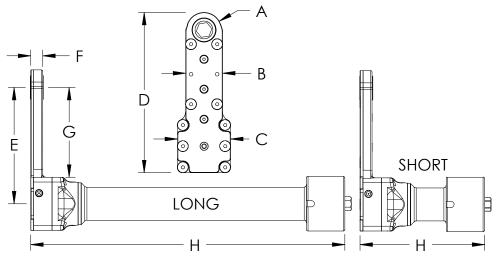


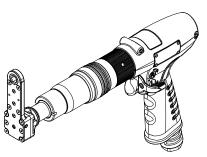

23571 MOTOR SHOWN WITH 22285 ATTACHMENT

TORQUE AT # OF **TUBE** ATTACHMENT NOSE GEAR Α В C D Ε F G Н **GEARS** [H] [in-lbs] .770 in 3.341 in 2.422 in 22284 10-31 5 LONG 1.110 in .250 in 1.869 in 6.546 in .366 in 2.422 in 22285 10-31 5 **SHORT** .366 in .770 in 1.110 in 3.341 in .250 in 1.869 in 2.596 in 7 22286 8-23 LONG .366 in .770 in 1.110 in 4.591 in 3.672 in .250 in 3.119 in 6.681 in 7 .250 in 22287 8-23 **SHORT** .366 in .770 in 1.110 in 4.591 in 3.672 in 3.119 in 2.731 in

 Nose Gear Selection

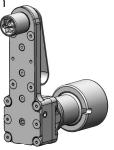


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SIZE	TYPE
* 20515	9/32	SOCKET DRIVER
20516	1/4	SQ DRIVE MALE

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO

 
KEY CONTROL IS REQUIRED

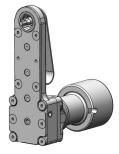

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

١.	SIZ	ZΕ		TYPE		
* 20403		7/32		X FLUSH		
	1,	/4	HE	X FLUSH		
	9/	32	HE	X FLUSH		
* 20406		5/16		HEX FLUSH		
* 20407		11/32		HEX FLUSH		
JIFFY TOP			YS FLU	SH		
1/	16	5,	/64	3/32		
18	937	18	938	18939		
	1/	7/3 1, 9/3 5/	7/32 1/4 9/32 5/16 11/32 Y TORQUE KE' 1/16 5,	7/32 HEX 1/4 HEX 9/32 HEX 5/16 HEX 11/32 HEX 7 TORQUE KEYS FLU 1/16 5/64		

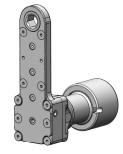

HEX THRU

The hex listed runs completely through the nose gear. No key system is used.


PART NO.	SIZE	TYPE
20477	7/32	HEX THRU
20478	1/4	HEX THRU
15466	9/32	HEX THRU
15467	5/16	HEX THRU
15468	11/32	HEX THRU

jiffyairtool.com

18-54 in-lbs / 2.0-6.1 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 250 RPM

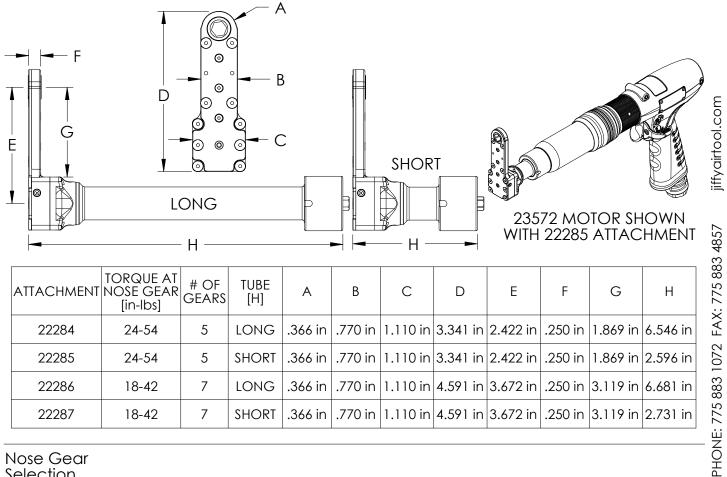

A	ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
	22284	24-54	5	LONG	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.250 in	1.869 in	6.546 in
	22285	24-54	5	SHORT	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.250 in	1.869 in	2.596 in
	22286	18-42	7	LONG	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.250 in	3.119 in	6.681 in
	22287	18-42	7	SHORT	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.250 in	3.119 in	2.731 in

 Nose Gear Selection

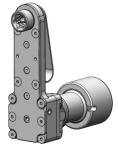


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

PART NO.	SI7F	l TYPF
.,	0.22	
* 20515	9/32	SOCKET DRIVER
20516	1/4	SQ DRIVE MALE

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS

 
ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

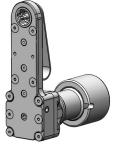

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO.		SIZE		TYPE		
* 20403		7/32		HEX FLUSH		
* 20404		1/4		HEX FLUSH		
* 20405		9/32		HEX FLUSH		
* 20406		5/16		HEX FLUSH		
* 20407		11/32		HEX FLUSH		
JIFFY	' TOR	RQU	E KE	YS FLU	SH	
KEY HEX	1/1	/16 5,		/64	3/32	
PART NO.	189	37	18938		18939	

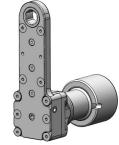 


HEX THRU


PART NO.	SIZE	TYPE
20477	7/32	HEX THRU
20478	1/4	HEX THRU
15466	9/32	HEX THRU
15467	5/16	HEX THRU
15468	11/32	HEX THRU

9-34 in-lbs / 1.0-3.8 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 250 RPM FOR BACKDRIVE APPLICATION

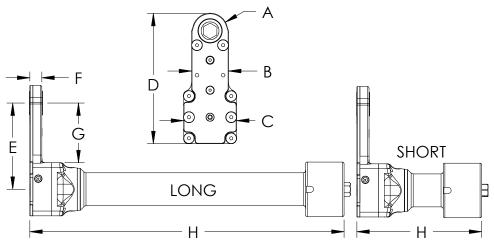


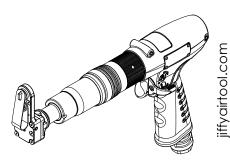

23571 MOTOR SHOWN WITH 22283 ATTACHMENT -BACK DRIVE ONLY-

ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	Α	В	С	D	E	F	G	Н
22282	11-34	4	LONG	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.250 in	1.244 in	6.546 in
22283	11-34	4	SHORT	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.250 in	1.244 in	2.599 in
25970	9-27	6	LONG	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.250 in	2.244 in	6.681 in
25971	9-27	6	SHORT	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.250 in	2.244 in	2.704 in

Nose Gear Selection

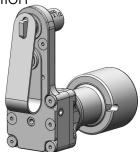


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

	•	
PART NO.	SIZE	TYPE
* 20515	9/32	SOCKET DRIVER
20516	1/4	SQ DRIVE MALE

* NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS


ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

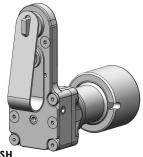

HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO		SIZ	ZΕ		TYPE	
* 20403	7/:	32	HEX FLUSH			
* 20404	1/	′ 4	HEX FLUSH			
* 20405		9/:	32	HE	X FLUSH	
* 20406		5/	16	HE	X FLUSH	
* 20407		11/	′32	HEX FLUSH		
JIFFY	RQU	E KE	YS FLU	SH		
KEY HEX	1/	/16 5,		/64	3/32	
PART NO.	18	937	18	938	18939	

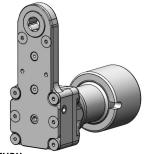


HEX THRU

PART NO.	SIZE	TYPE
20477	7/32	HEX THRU
20478	1/4	HEX THRU
15466	9/32	HEX THRU
15467	5/16	HEX THRU
15468	11/32	HEX THRU

21-61 in-lbs / 2.4-6.9 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 250 RPM FOR BACKDRIVE APPLICATION

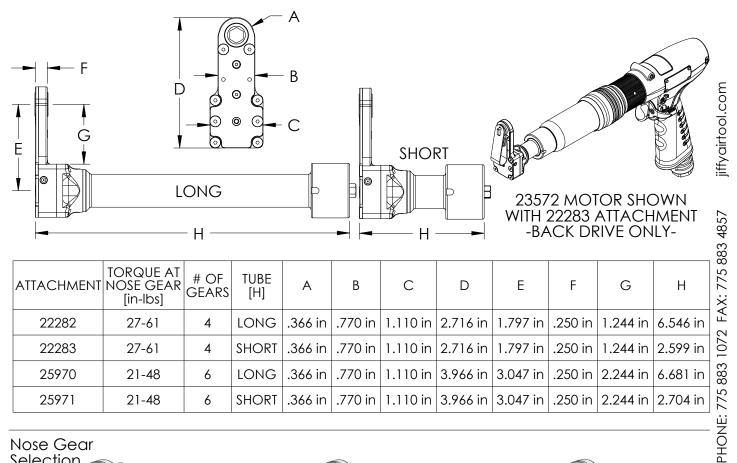

ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
22282	27-61	4	LONG	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.250 in	1.244 in	6.546 in
22283	27-61	4	SHORT	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.250 in	1.244 in	2.599 in
25970	21-48	6	LONG	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.250 in	2.244 in	6.681 in
25971	21-48	6	SHORT	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.250 in	2.244 in	2.704 in

Nose Gear Selection

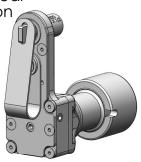


The **SOCKET DRIVER** will adapt the attachment to accept Series 1 Sockets. Order with or without the Jiffy Key System.

	-	
PART NO.	SIZE	TYPE
* 20515	9/32	SOCKET DRIVER
20516	1/4	SQ DRIVE MALE

NO KEY CONTROL ASSEMBLY NEEDED IF HOLE PREPARATION REQUIRES INTERFERENCE FIT OF BOLTS OR PINS


ADD A "U" TO THE END OF THE ATTACHMENT NUMBER IF NO KEY CONTROL IS REQUIRED

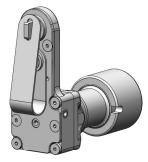

HEX FLUSH

The socket is built_into the nose gear. Choose the Hex Flush gear and Key from the table or order without the Jiffy Key System.

PART NO	ART NO.				TYPE		
* 20403		7/	32	HEX	X FLUSH		
* 20404		1,	/4	HE	HEX FLUSH		
* 20405		9/	32	HE	X FLUSH		
* 20406		5/	16	HE	X FLUSH		
* 20407		11/	/32	HE	X FLUSH		
JIFF	/ TO	ORQUE KEYS FL			SH		
KEY HEX	1/	16	5,	/64	3/32		
PART NO.	18	937	18	938	18939		

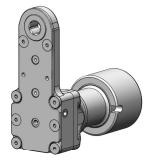


HEX THRU

PART NO.	SIZE	TYPE
20477	7/32	HEX THRU
20478	1/4	HEX THRU
15466	9/32	HEX THRU
15467	5/16	HEX THRU
15468	11/32	HEX THRU

18-54 in-lbs / 2.0-6.1 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 250 RPM

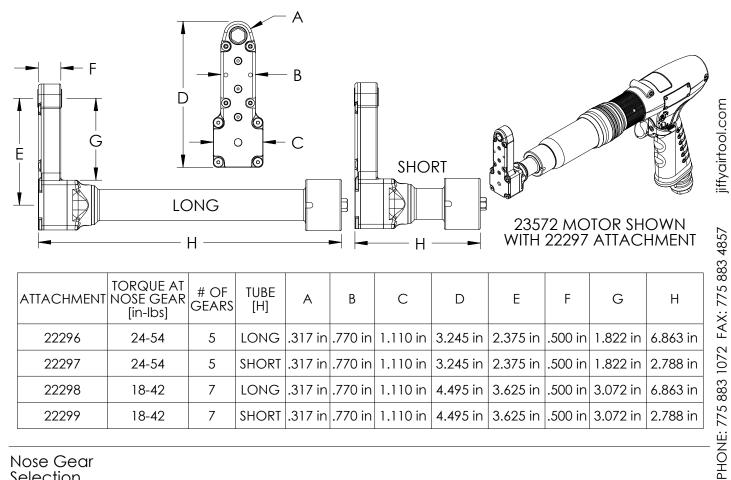


,	ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
	22296	24-54	5	LONG	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.500 in	1.822 in	6.863 in
	22297	24-54	5	SHORT	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.500 in	1.822 in	2.788 in
	22298	18-42	7	LONG	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.500 in	3.072 in	6.863 in
	22299	18-42	7	SHORT	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.500 in	3.072 in	2.788 in

Nose Gear Selection

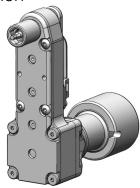

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

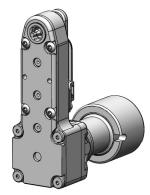


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

	JIFFY	TORQ	JE KEYS	S FLUSH	ł	
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16
PART NO.	18310	18311	18312	18313	18940	18941

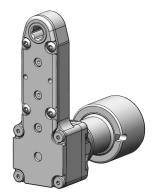


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU


36-75 in-lbs / 4.1-8.5 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 310 RPM

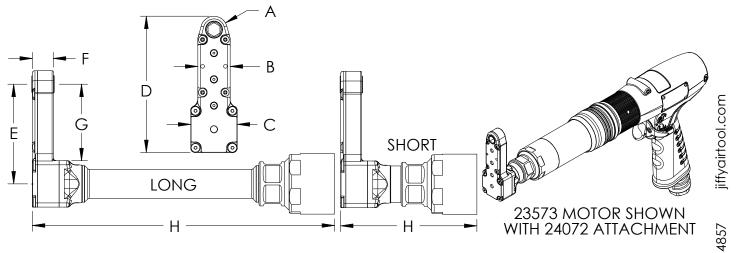


-	——— Н			-	-	- H		WITH 2	24072 A	TTACH	MENT	4857
ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н	: 775 883
24077	48-75	5	LONG	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.500 in	1.822 in	7.194 in	FAX:
24072	48-75	5	SHORT	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.500 in	1.822 in	3.244 in	1072
24078	36-57	7	LONG	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.500 in	3.072 in	7.319 in	883
24073	36-57	7	SHORT	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.500 in	3.072 in	3.369 in	775
Nose Gear Selection												PHONE

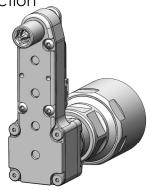

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

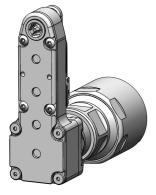


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH									
	KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16		
	PART NO.	18310	18311	18312	18313	18940	18941		

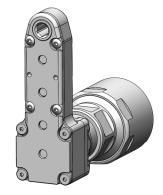


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU

52-120 in-lbs / 5.9-13.6 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 220 RPM

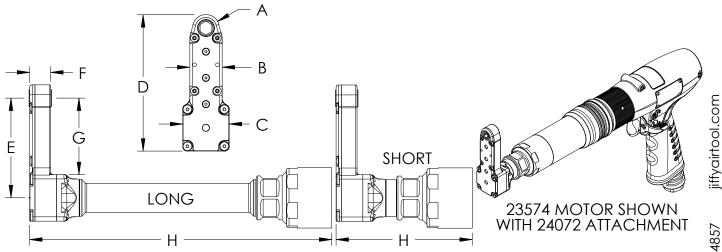


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	Α	В	С	D	Е	F	G	Н
24077	68-120	5	LONG	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.500 in	1.822 in	7.194 in
24072	68-120	5	SHORT	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.500 in	1.822 in	3.244 in
24078	52-94	7	LONG	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.500 in	3.072 in	7.319 in
24073	52-94	7	SHORT	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.500 in	3.072 in	3.369 in

Nose Gear Selection

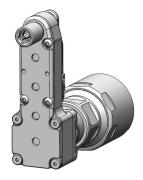

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

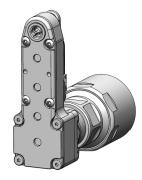


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH									
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16			
PART NO.	18310	18311	18312	18313	18940	18941			

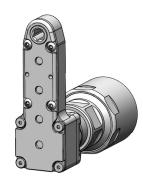


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU

86-120 in-lbs / 9.7-13.6 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 160 RPM

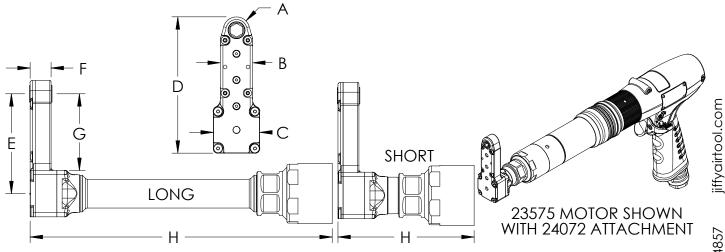


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
24077	112-120	5	LONG	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.500 in	1.822 in	7.194 in
24072	112-120	5	SHORT	.317 in	.770 in	1.110 in	3.245 in	2.375 in	.500 in	1.822 in	3.244 in
24078	86-120	7	LONG	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.500 in	3.072 in	7.319 in
24073	86-120	7	SHORT	.317 in	.770 in	1.110 in	4.495 in	3.625 in	.500 in	3.072 in	3.369 in

Nose Gear Selection

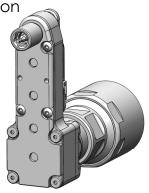

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

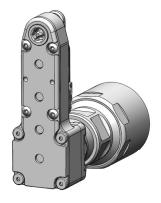


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH						
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16
PART NO.	18310	18311	18312	18313	18940	18941

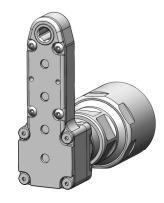


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU

21-61 in-lbs / 2.4-6.9 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 250 RPM FOR BACKDRIVE APPLICATION

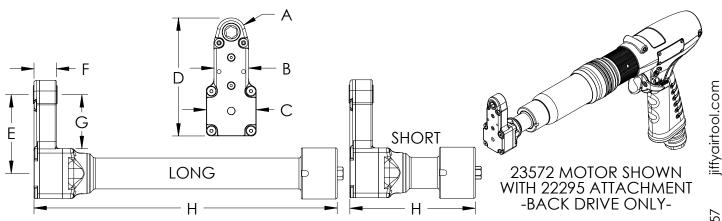


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
22294	27-61	4	LONG	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.500 in	1.197 in	6.739 in
22295	27-61	4	SHORT	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.500 in	1.197 in	2.789 in
25972	21-48	6	LONG	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.500 in	2.447 in	6.864 in
25973	21-48	6	SHORT	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.500 in	2.447 in	2.914 in

Nose Gear Selection

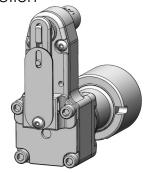

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

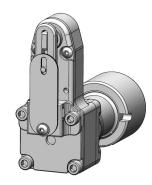


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH							
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16	
PART NO.	18310	18311	18312	18313	18940	18941	

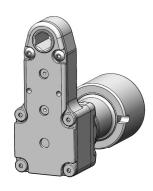


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 310 RPM FOR BACKDRIVE APPLICATION

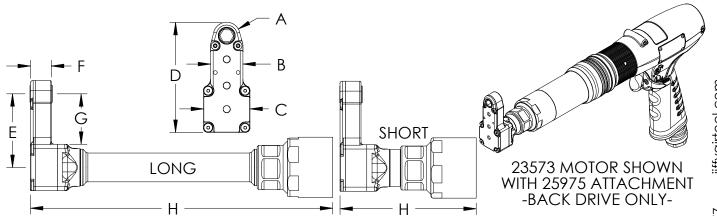


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	E	F	G	Н
25974	53-84	4	LONG	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.500 in	1.197 in	6.739 in
25975	53-84	4	SHORT	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.500 in	1.197 in	2.789 in
25976	42-66	6	LONG	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.500 in	2.447 in	6.864 in
25977	42-66	6	SHORT	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.500 in	2.447 in	2.914 in

Nose Gear Selection

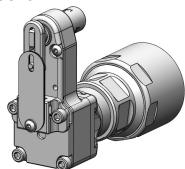

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	468 1/4 SQ DRIVE	

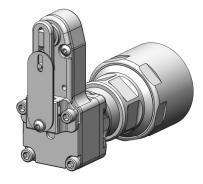


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH									
	KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16		
	PART NO.	18310	18311	18312	18313	18940	18941		

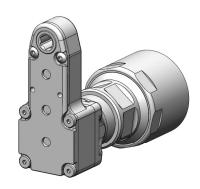


HEX THRU

PART NO.	SIZE	TYPE
12475	7/32	HEX THRU
12476	1/4	HEX THRU
12477	9/32	HEX THRU

60-120 in-lbs / 6.8-13.6 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .317 inch / 8.1 mm NOSE RADIUS - 220 RPM FOR BACKDRIVE APPLICATION

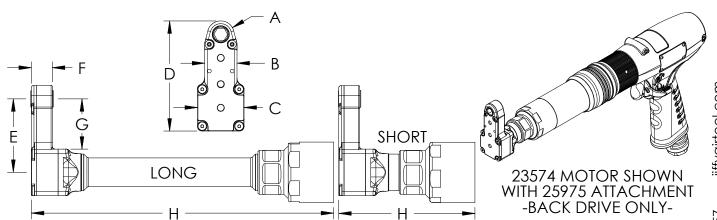


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	Α	В	С	D	Е	F	G	Н
25974	76-120	4	LONG	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.500 in	1.197 in	7.197 in
25975	76-120	4	SHORT	.317 in	.770 in	1.110 in	2.620 in	1.750 in	.500 in	1.197 in	3.244 in
25976	60-108	6	LONG	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.500 in	2.447 in	7.319 in
25977	60-108	6	SHORT	.317 in	.770 in	1.110 in	3.870 in	3.000 in	.500 in	2.447 in	3.369 in

Nose Gear Selection

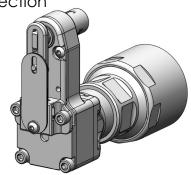

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
12467	9/32	SOCKET DRIVER
12468	1/4	SQ DRIVE MALE

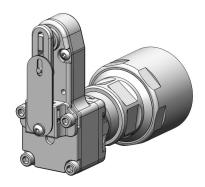


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
12469	7/32	HEX FLUSH
12470	1/4	HEX FLUSH
12471	9/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH									
KEY HEX	1/8	5/32	3/16						
PART NO.	18310	18311	18312	18313	18940	18941			

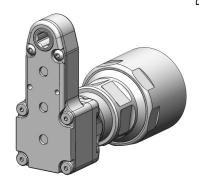

HEX THRU

PART NO.	SIZE	TYPE		
12475	7/32	HEX THRU		
12476	1/4	HEX THRU		
12477	9/32	HEX THRU		


PHONE: 775 883 1072 FAX: 775 883 4857 jiffyairtool.com


LTI SERIES 2


18-54 in-lbs / 2.0-6.1 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 250 RPM

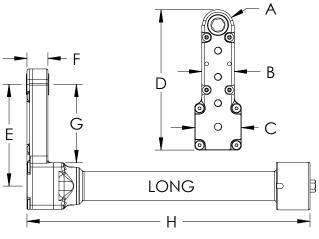

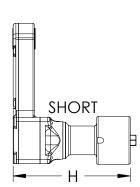


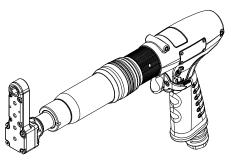

23572 MOTOR SHOWN WITH 22309 ATTACHMENT


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	E	F	G	Н
22308	24-54	5	LONG	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.500 in	1.869 in	6.783 in
22309	24-54	5	SHORT	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.500 in	1.869 in	2.789 in
22310	18-42	7	LONG	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.500 in	3.119 in	6.863 in
22311	18-42	7	SHORT	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.500 in	3.119 in	2.913 in

Nose Gear Selection ∠

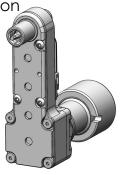

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE			
15372	9/32	SOCKET DRIVER			
15373	1/4	SQ DRIVE MALE			

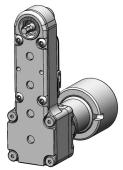


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

| JIFFY TORQUE KEYS FLUSH | KEY HEX | 1/16 | 5/64 | 3/32 | 1/8 | 5/32 | 3/16 | PART NO. | 18310 | 18311 | 18312 | 18313 | 18940 | 18941 |

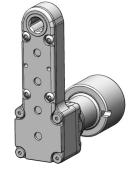


HEX THRU

PART NO.	SIZE	TYPE		
15379	7/32	HEX THRU		
15380	1/4	HEX THRU HEX THRU		
15381	9/32			
15337	5/16	HEX THRU		
15461	11/32	HEX THRU		


36-75 in-lbs / 4.1-8.5 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 310 RPM

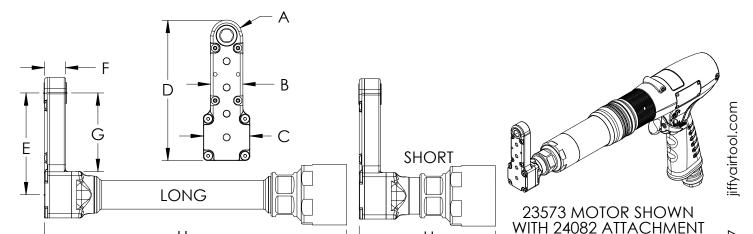


4	—— Н			-	-	— H —	-	WIIH 2	4082 A	MACH	MENI	4857
ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н	775 883
24087	48-75	5	LONG	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.500 in	1.869 in	7.194 in	FAX:
24082	48-75	5	SHORT	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.500 in	1.869 in	2.789 in	1072
24088	36-57	7	LONG	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.500 in	3.119 in	6.863 in	883
24083	36-57	7	SHORT	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.500 in	3.119 in	2.913 in	: 775
Nose Gear Selection								PHONE				

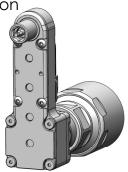

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

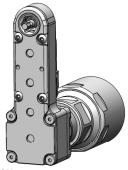


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH						
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16
PART NO.	18310	18311	18312	18313	18940	18941

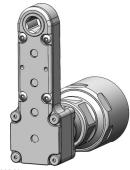


HEX THRU

PART NO.	SIZE	TYPE
15379	7/32	HEX THRU
15380	1/4	HEX THRU
15381	9/32	HEX THRU
15337	5/16	HEX THRU
15461	11/32	HEX THRU

52-120 in-lbs / 5.9-13.6 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 220 RPM

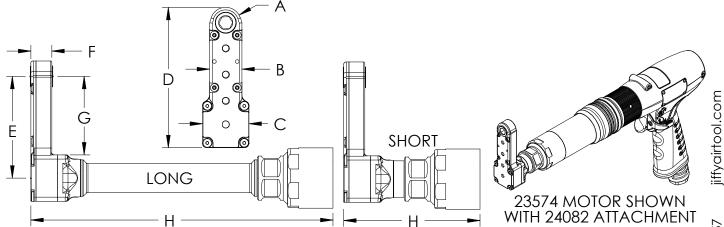


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]		TUBE [H]	Α	В	С	D	Е	F	G	Н
24087	68-120	5	LONG	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.500 in	1.869 in	7.194 in
24082	68-120	5	SHORT	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.500 in	1.869 in	2.789 in
24088	52-94	7	LONG	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.500 in	3.119 in	6.863 in
24083	52-94	7	SHORT	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.500 in	3.119 in	2.913 in

Nose Gear Selection

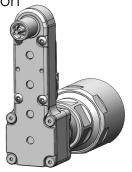

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

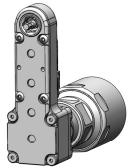


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

	JIFFY	'TORQ	JE KEY	S FLUSH	1	
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16
PART NO	. 18310	18311	18312	18313	18940	18941

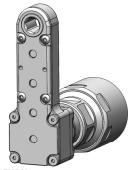


HEX THRU

PART NO.	SIZE	TYPE
15379	7/32	HEX THRU
15380	1/4	HEX THRU
15381	9/32	HEX THRU
15337	5/16	HEX THRU
15461	11/32	HEX THRU

86-120 in-lbs / 9.7-13.6 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 160 RPM

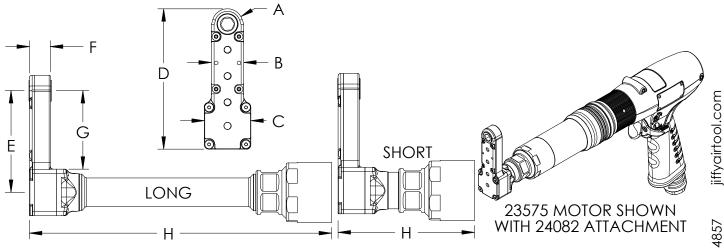


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
24087	112-120	5	LONG	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.500 in	1.869 in	7.194 in
24082	112-120	5	SHORT	.366 in	.770 in	1.110 in	3.341 in	2.422 in	.500 in	1.869 in	2.789 in
24088	86-120	7	LONG	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.500 in	3.119 in	6.863 in
24083	86-120	7	SHORT	.366 in	.770 in	1.110 in	4.591 in	3.672 in	.500 in	3.119 in	2.913 in

Nose Gear Selection

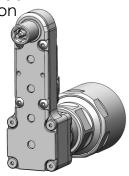

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

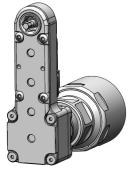


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

JIFFY TORQUE KEYS FLUSH								
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16		
PART NO.	18310	18311	18312	18313	18940	18941		

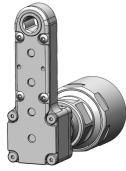


HEX THRU


PART NO.	SIZE	TYPE		
15379	7/32	HEX THRU		
15380	1/4	HEX THRU		
15381	9/32	HEX THRU		
15337	5/16	HEX THRU		
15461	11/32	HEX THRU		
	15379 15380 15381 15337	15379 7/32 15380 1/4 15381 9/32 15337 5/16		


21-61 in-lbs / 2.4-6.9 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 250 RPM FOR BACKDRIVE APPLICATION

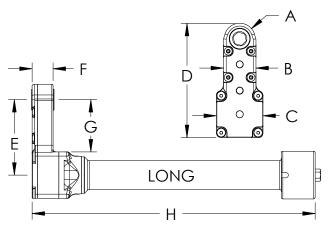

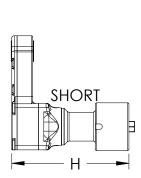


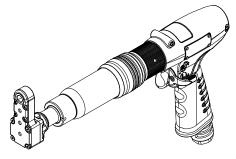

23572 MOTOR SHOWN WITH 22307 ATTACHMENT -BACK DRIVE ONLY-


ATTACHME	TORQUE AT NOSE GEAR [in-lbs]		TUBE [H]	А	В	С	D	E	F	G	Н
22306	27-61	4	LONG	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.500 in	1.244 in	6.734 in
22307	27-61	4	SHORT	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.500 in	1.244 in	2.791 in
25978	21-48	6	LONG	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.500 in	2.494 in	6.863 in
25979	21-48	6	SHORT	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.500 in	2.494 in	2.913 in

Nose Gear Selection

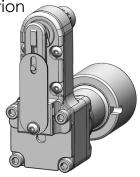

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

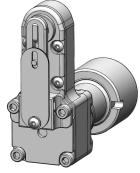


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

| JIFFY TORQUE KEYS FLUSH | KEY HEX | 1/16 | 5/64 | 3/32 | 1/8 | 5/32 | 3/16 | PART NO. | 18310 | 18311 | 18312 | 18313 | 18940 | 18941 |

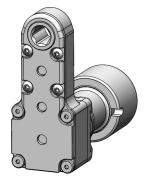


HEX THRU

PART NO.	SIZE	TYPE		
15379	7/32	HEX THRU		
15380	1/4	HEX THRU		
15381	9/32	HEX THRU		
15337	5/16	HEX THRU		
15461	11/32	HEX THRU		


42-84 in-lbs / 4.7-9.5 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 310 RPM FOR BACKDRIVE APPLICATION

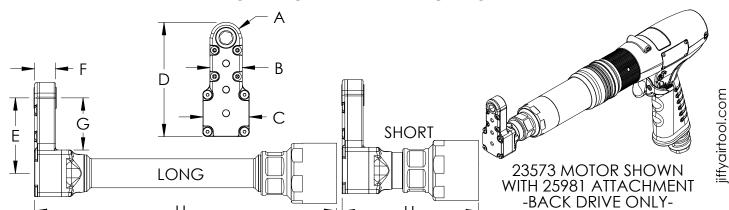


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
25980	53-84	4	LONG	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.500 in	1.244 in	7.194 in
25981	53-84	4	SHORT	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.500 in	1.244 in	3.244 in
25982	42-66	6	LONG	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.500 in	2.494 in	7.319 in
25983	42-66	6	SHORT	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.500 in	2.494 in	3.369 in

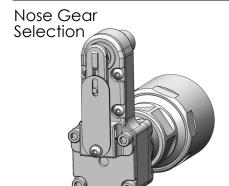

Н

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE
15372	9/32	SOCKET DRIVER
15373	1/4	SQ DRIVE MALE

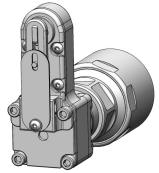


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

| JIFFY TORQUE KEYS FLUSH | KEY HEX | 1/16 | 5/64 | 3/32 | 1/8 | 5/32 | 3/16 | PART NO. | 18310 | 18311 | 18312 | 18313 | 18940 | 18941 |

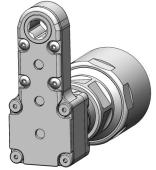


HEX THRU

PART NO.	SIZE	TYPE		
15379	7/32	HEX THRU		
15380	1/4	HEX THRU		
15381	9/32	HEX THRU		
15337	5/16	HEX THRU		
15461	11/32	HEX THRU		

60-120 in-lbs / 6.8-13.6 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .366 inch / 9.3 mm NOSE RADIUS - 220 RPM FOR BACKDRIVE APPLICATION

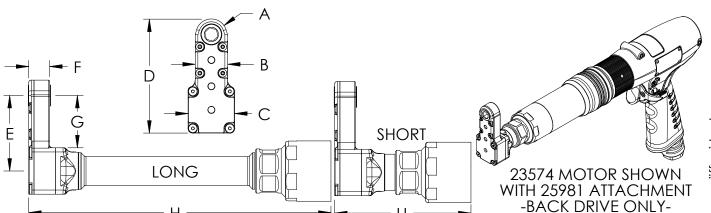

ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G	Н
25980	76-120	4	LONG	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.500 in	1.244 in	7.194 in
25981	76-120	4	SHORT	.366 in	.770 in	1.110 in	2.716 in	1.797 in	.500 in	1.244 in	3.244 in
25982	60-108	6	LONG	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.500 in	2.494 in	7.319 in
25983	60-108	6	SHORT	.366 in	.770 in	1.110 in	3.966 in	3.047 in	.500 in	2.494 in	3.369 in


Nose Gear Selection ∠

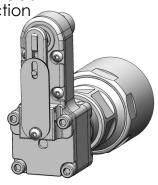

Η

The **SOCKET DRIVER** will adapt the attachment to accept Series 2 Sockets.

PART NO.	SIZE	TYPE			
15372	9/32	SOCKET DRIVER			
15373	1/4	SQ DRIVE MALE			

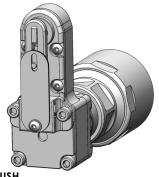


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 2 table.

PART NO.	SIZE	TYPE
15374	7/32	HEX FLUSH
15375	1/4	HEX FLUSH
15376	9/32	HEX FLUSH
15377	5/16	HEX FLUSH
15460	11/32	HEX FLUSH

| JIFFY TORQUE KEYS FLUSH | KEY HEX | 1/16 | 5/64 | 3/32 | 1/8 | 5/32 | 3/16 | PART NO. | 18310 | 18311 | 18312 | 18313 | 18940 | 18941 |

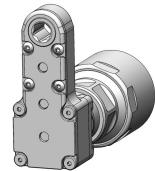

HEX THRU


The hex listed runs completely through the nose gear. No key system is used.

	PART NO.	SIZE	TYPE
	15379	7/32	HEX THRU
	15380	1/4	HEX THRU
ĺ	15381	9/32	HEX THRU
	15337	5/16	HEX THRU
	15461	11/32	HEX THRU

52-122 in-lbs / 5.9-13.8 Nm




L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .500 inch / 12.7 mm NOSE RADIUS - 220 RPM

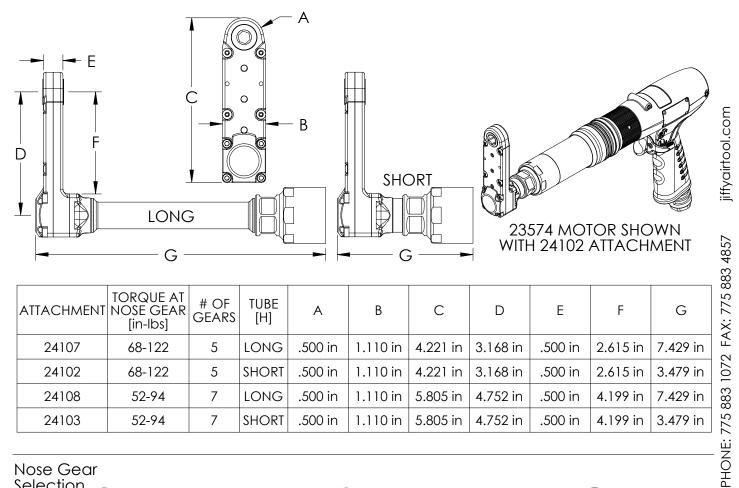


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	Α	В	С	D	Е	F	G
24107	68-122	5	LONG	.500 in	1.110 in	4.221 in	3.168 in	.500 in	2.615 in	7.429 in
24102	68-122	5	SHORT	.500 in	1.110 in	4.221 in	3.168 in	.500 in	2.615 in	3.479 in
24108	52-94	7	LONG	.500 in	1.110 in	5.805 in	4.752 in	.500 in	4.199 in	7.429 in
24103	52-94	7	SHORT	.500 in	1.110 in	5.805 in	4.752 in	.500 in	4.199 in	3.479 in



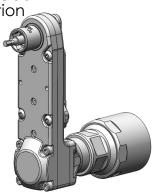

The **SOCKET DRIVER** will adapt the attachment to accept Series 3

000.00.00		
PART NO.	SIZE	TYPE
18449	9/32	SOCKET DRIVER
15905	1/4	SQ DRIVE MALE
20748	3/8	SQ DRIVE MALE

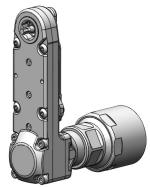


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 3 table.

PART NO.	SIZE	TYPE
16038	5/16	HEX FLUSH
15889	11/32	HEX FLUSH
15890	3/8	HEX FLUSH
15891	7/16	HEX FLUSH

JIFFY TORQUE KEYS FLUSH						
KEY HEX	1/16	5/64	3/32	1/8	5/32	3/16
PART NO.	18310	18311	18312	18313	18940	18941

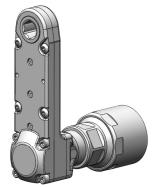


HEX THRU

PART NO.	SIZE	TYPE
16039	5/16	HEX THRU
15892	11/32	HEX THRU
15893	3/8	HEX THRU
15894	7/16	HEX THRU
	16039 15892 15893	16039 5/16 15892 11/32 15893 3/8


86-204 in-lbs / 9.7-23.0 Nm



L TYPE INSTALLATION TOOLS FOR TORQUE NUT APPLICATIONS .500 inch / 12.7 mm NOSE RADIUS - 160 RPM

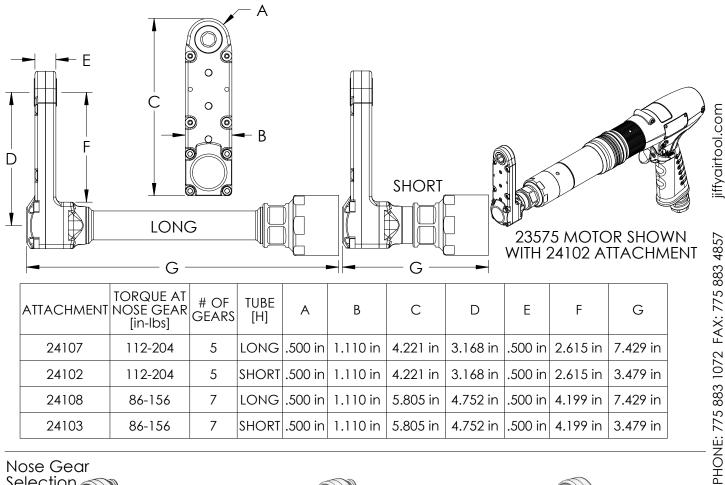


ATTACHMENT	TORQUE AT NOSE GEAR [in-lbs]	# OF GEARS	TUBE [H]	А	В	С	D	Е	F	G
24107	112-204	5	LONG	.500 in	1.110 in	4.221 in	3.168 in	.500 in	2.615 in	7.429 in
24102	112-204	5	SHORT	.500 in	1.110 in	4.221 in	3.168 in	.500 in	2.615 in	3.479 in
24108	86-156	7	LONG	.500 in	1.110 in	5.805 in	4.752 in	.500 in	4.199 in	7.429 in
24103	86-156	7	SHORT	.500 in	1.110 in	5.805 in	4.752 in	.500 in	4.199 in	3.479 in

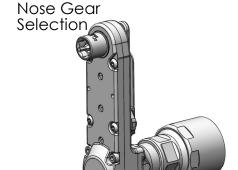

The **SOCKET DRIVER** will adapt the attachment to accept Series 3 Sockets.

PART NO.	SIZE	TYPE
18449	9/32	SOCKET DRIVER
15905	1/4	SQ DRIVE MALE
20748	3/8	SQ DRIVE MALE

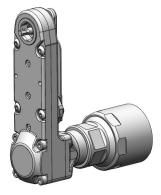


HEX FLUSH

The socket is built into the nose gear. Choose the Hex Flush gear and Key from the Series 3 table.

PART NO.	SIZE	TYPE
16038	5/16	HEX FLUSH
15889	11/32	HEX FLUSH
15890	3/8	HEX FLUSH
15891	7/16	HEX FLUSH

JIFFY TORQUE KEYS FLUSH							
KEY	HEX	1/16	5/64	3/32	1/8	5/32	3/16
PART	NO.	18310	18311	18312	18313	18940	18941

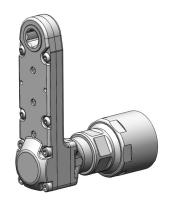


HEX THRU


, ,		
PART NO.	SIZE	TYPE
16039	5/16	HEX THRU
15892	11/32	HEX THRU
15893	3/8	HEX THRU
15894	7/16	HEX THRU

FITS SERIES 1 ATTACHMENTS

TORQUE CONTROL INSTALLATION 1/16" / 1.59mm JIFFY KEY



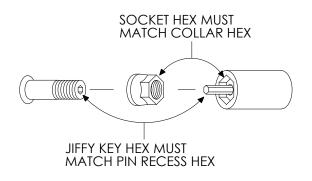

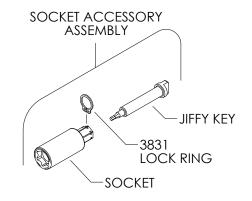


SEE PAGE 6 FOR SOCKET OPTIONS.


JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	3/4"	1"	1 1/2"
	7/20"	SOCKET ACCESSORY ASSEMBLY	18613	18614	18615	18616	18617
	7/32"	SOCKET	12517	12518	12519	12520	12521
	5.56mm	JIFFY KEY 1/16 TORQUE	18688	18689	18690	18691	18692
				•			
	1/4" 6.35mm	SOCKET ACCESSORY ASSEMBLY	18618	18619	18620	18621	18622
		SOCKET	12522	12523	12524	12525	12526
		JIFFY KEY 1/16 TORQUE	18688	18689	18690	18691	18692
1/1/"	9/32" 7.14mm	SOCKET ACCESSORY ASSEMBLY	18623	18624	18625	18626	18627
1/16"		SOCKET	12527	12528	12529	12530	12531
1.59mm		JIFFY KEY 1/16 TORQUE	18688	18689	18690	18691	18692
	<i>E /1 L</i> "	SOCKET ACCESSORY ASSEMBLY	18628	18629	18630	18631	18632
	5/16"	SOCKET	12532	12533	12534	12535	12536
	7.93mm	JIFFY KEY 1/16 TORQUE	18688	18689	18690	18691	18692
	11/20!!	SOCKET ACCESSORY ASSEMBLY	18633	18634	18635	18636	18637
	11/32"	SOCKET	12537	12538	12539	12540	12541
	8.73mm	JIFFY KEY 1/16 TORQUE	18688	18689	18690	18691	18692

FITS SERIES 1 ATTACHMENTS

TORQUE CONTROL INSTALLATION 5/64" / 1.98mm JIFFY KEY



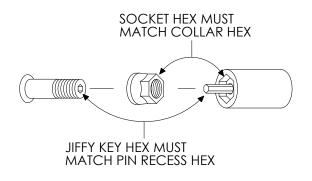

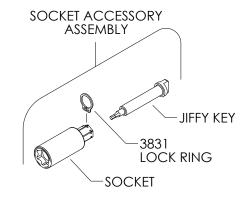


SEE PAGE 6 FOR SOCKET OPTIONS.


JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	3/4"	1"	1 1/2"
	7/20"	SOCKET ACCESSORY ASSEMBLY	18638	18639	18640	18641	18642
	7/32" 5.56mm	SOCKET	12517	12518	12519	12520	12521
		JIFFY KEY 5/64 TORQUE	18693	18694	18695	18696	18697
	1 / 4"	SOCKET ACCESSORY ASSEMBLY	18643	18644	18645	18646	18647
	1/4"	SOCKET	12522	12523	12524	12525	12526
	6.35mm	JIFFY KEY 5/64 TORQUE	18693	18694	18695	18696	18697
<i>E / L A</i> ''	9/32'' 7.14mm	SOCKET ACCESSORY ASSEMBLY	18648	18649	18650	18651	18652
5/64"		SOCKET	12527	12528	12529	12530	12531
1.98mm		JIFFY KEY 5/64 TORQUE	18693	18694	18695	18696	18697
	E /1 4"	SOCKET ACCESSORY ASSEMBLY	18653	18654	18655	18656	18657
	5/16"	SOCKET	12532	12533	12534	12535	12536
	7.93mm	JIFFY KEY 5/64 TORQUE	18693	18694	18695	18696	18697
	11/20"	SOCKET ACCESSORY ASSEMBLY	18658	18659	18660	18661	18662
	11/32"	SOCKET	12537	12538	12539	12540	12541
	8.73mm	JIFFY KEY 5/64 TORQUE	18693	18694	18695	18696	18697

FITS SERIES 1 ATTACHMENTS

TORQUE CONTROL INSTALLATION 3/32" / 2.38mm JIFFY KEY



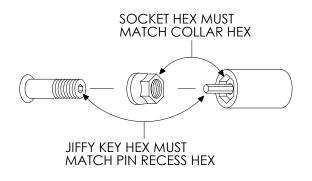

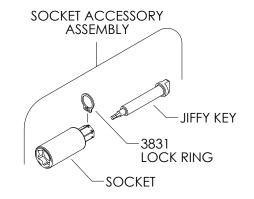



SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	3/4"	1"	1 1/2"			
	7/20"	SOCKET ACCESSORY ASSEMBLY	18663	18664	18665	18666	18667			
	7/32"	SOCKET	12517	12518	12519	12520	12521			
	5.56mm	JIFFY KEY 3/32 TORQUE	18698	18699	18700	18701	18702			
	1 / 411	SOCKET ACCESSORY ASSEMBLY	18668	18669	18670	18671	18672			
	1/4"	SOCKET	12522	12523	12524	12525	12526			
	6.35mm	JIFFY KEY 3/32 TORQUE	18698	18699	18700	18701	18702			
2/20"	9/32" 7.14mm	SOCKET ACCESSORY ASSEMBLY	18673	18674	18675	18676	18677			
3/32"		SOCKET	12527	12528	12529	12530	12531			
2.38mm		JIFFY KEY 3/32 TORQUE	18698	18699	18700	18701	18702			
	<i>E /1 L</i> "	SOCKET ACCESSORY ASSEMBLY	18678	18679	18680	18681	18682			
	5/16"	SOCKET	12532	12533	12534	12535	12536			
	7.93mm	JIFFY KEY 3/32 TORQUE	18698	18699	18700	18701	18702			
	11/20"	SOCKET ACCESSORY ASSEMBLY	18683	18684	18685	18686	18687			
	11/32"	SOCKET	12537	12538	12539	12540	12541			
	8.73mm	JIFFY KEY 3/32 TORQUE	18698	18699	18700	18701	18702			

TORQUE CONTROL INSTALLATION 1/16" / 1.59mm JIFFY KEY



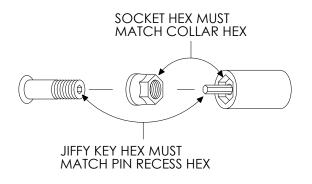

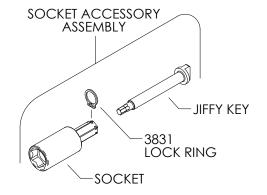



SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	1"	1 1/2"	2"	2 1/2"	3"
	7/20"	SOCKET ACCESSORY ASSEMBLY	18314	18315	18316	18317	18318	18319	18320
	7/32"	JOCKLI		12680	12681	12682	12683	12684	12685
	5.56mm	JIFFY KEY 1/16 TORQUE	18282	18283	18284	18285	18286	18287	18288
	1 //"	SOCKET ACCESSORY ASSEMBLY	18321	18322	18323	18324	18325	18326	18327
	1/4"	SOCKET	12686	12687	14446	12688	12689	12690	12691
	6.35mm	JIFFY KEY 1/16 TORQUE	18282	18283	18284	18285	18286	18287	18288
1/16"	0 /20"	SOCKET ACCESSORY ASSEMBLY	18328	18329	18330	18331	18332	18333	18334
· -	9/32"	SOCKET	12692	12693	12694	12695	12696	12697	12698
1.59mm	7.14mm	JIFFY KEY 1/16 TORQUE	18282	18283	18284	18285	18286	18287	18288
	5/16"	SOCKET ACCESSORY ASSEMBLY	18335	18336	18337	18338	18339	18340	18341
	_	SOCKET	12699	12700	14445	12701	12702	12703	12704
	7.93mm	JIFFY KEY 1/16 TORQUE	18282	18283	18284	18285	18286	18287	18288
	11/20"	SOCKET ACCESSORY ASSEMBLY	18342	18343	18344	18345	18346	18347	18348
	11/32"	SOCKET	12705	12706	12707	12708	12709	12710	12711
	8.73mm	JIFFY KEY 1/16 TORQUE	18282	18283	18284	18285	18286	18287	18288

TORQUE CONTROL INSTALLATION 5/64" / 1.98mm JIFFY KEY



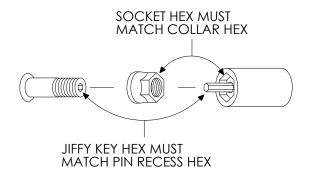

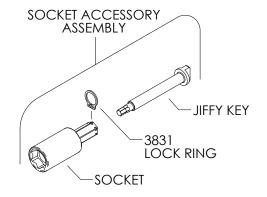



SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	1"	1 1/2"	2"	2 1/2"	3"
	7/20"	SOCKET ACCESSORY ASSEMBLY	18349	18350	18351	18352	18353	18354	18355
	7/32"	SOCKET	12679	12680	12681	12682	12683	12684	12685
	5.56mm	JIFFY KEY 5/64 TORQUE	18289	18290	18291	18292	18293	18294	18295
	1 / 4"	SOCKET ACCESSORY ASSEMBLY	18356	18357	18358	18359	18360	18361	18362
	1/4"	SOCKET	12686	12687	14446	12688	12689	12690	12691
	6.35mm	JIFFY KEY 5/64 TORQUE	18289	18290	18291	18292	18293	18294	18295
	0 /20"	SOCKET ACCESSORY ASSEMBLY	18363	18364	18365	18366	18367	18368	18369
	9/32"	SOCKET	12692	12693	12694	12695	12696	12697	12698
5/64"	7.14mm	JIFFY KEY 5/64 TORQUE	18289	18290	18291	18292	18293	18294	18295
1.98mm									
1.7011111	E /1 4"	SOCKET ACCESSORY ASSEMBLY	18370	18371	18372	18373	18374	18375	18376
	5/16"	SOCKET	12699	12700	14445	12701	12702	12703	12704
	7.93mm	JIFFY KEY 5/64 TORQUE	18289	18290	18291	18292	18293	18294	18295
	11/20"	SOCKET ACCESSORY ASSEMBLY	18377	18378	18379	18380	18381	18382	18383
	11/32"	SOCKET	12705	12706	12707	12708	12709	12710	12711
	8.73mm	JIFFY KEY 5/64 TORQUE	18289	18290	18291	18292	18293	18294	18295
		,							
	3/8"	SOCKET ACCESSORY ASSEMBLY	18384	18385	18386	18387	18388	18389	18390
	9.52mm	SOCKET	12767	12768	12769	12770	12771	12772	12773
	7.3211111	JIFFY KEY 5/64 TORQUE	18289	18290	18291	18292	18293	18294	18295

TORQUE CONTROL INSTALLATION 3/32" / 2.38mm JIFFY KEY



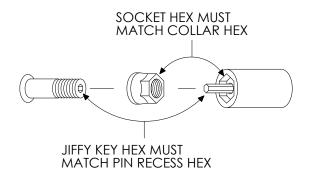

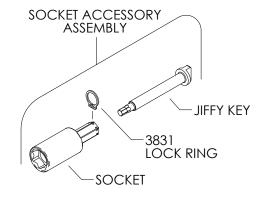



SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	1"	1 1/2"	2"	2 1/2"	3"
	F /1 /!!	SOCKET ACCESSORY ASSEMBLY	18391	18392	18393	18394	18395	18396	18397
	5/16"	SOCKET	12699	12700	14445	12701	12702	12703	12704
	7.93mm	JIFFY KEY 3/32 TORQUE	18296	18297	18298	18299	18300	18301	18302
	11/20"	SOCKET ACCESSORY ASSEMBLY	18398	18399	18400	18401	18402	18403	18404
	11/32"	SOCKET	12705	12706	12707	12708	12709	12710	12711
	8.73mm	JIFFY KEY 3/32 TORQUE	18296	18297	18298	18299	18300	18301	18302
3/32"	2 /0"	SOCKET ACCESSORY ASSEMBLY	18405	18406	18407	18408	18409	18410	18411
_	3/8"	SOCKET	12767	12768	12769	12770	12771	12772	12773
2.38mm	9.52mm	JIFFY KEY 3/32 TORQUE	18296	18297	18298	18299	18300	18301	18302
	7/16"	SOCKET ACCESSORY ASSEMBLY	18412	18413	18414	18415	18416	18417	18418
	_	SOCKET	12872	12873	12874	12875	12876	12877	12878
	11.11mm	JIFFY KEY 3/32 TORQUE	18296	18297	18298	18299	18300	18301	18302
		,							
	1/2"	SOCKET ACCESSORY ASSEMBLY	18843	18844	18845	18846	18847	18848	18849
	_	SOCKET	18485	18486	18487	18488	18489	18490	18491
	12.7mm	JIFFY KEY 3/32 TORQUE	18296	18297	18298	18299	18300	18301	18302

TORQUE CONTROL INSTALLATION 1/8" / 3.17mm JIFFY KEY



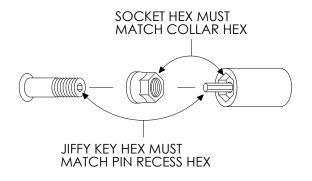

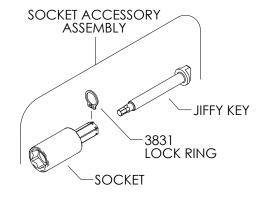



SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	1"	1 1/2"	2"	2 1/2"	3"
	2 /0"	SOCKET ACCESSORY ASSEMBLY	18419	18420	18421	18422	18423	18424	18425
	3/8"	SOCKET	12767	12768	12769	12770	12771	12772	12773
	9.52mm	JIFFY KEY 1/8 TORQUE	18303	18304	18305	18306	18307	18308	18309
	7/1/"	SOCKET ACCESSORY ASSEMBLY	18426	18427	18428	18429	18430	18431	18432
	7/16"	SOCKET	12872	12873	12874	12875	12876	12877	12878
1 /0"	11.11mm	JIFFY KEY 1/8 TORQUE	18303	18304	18305	18306	18307	18308	18309
1/8"									
3.17mm	- /OU	SOCKET ACCESSORY ASSEMBLY	18499	18500	18501	18502	18503	18504	18505
	1/2"	SOCKET	18485	18486	18487	18488	18489	18490	18491
	12.7mm	JIFFY KEY 1/8 TORQUE	18303	18304	18305	18306	18307	18308	18309
	0/1/11	SOCKET ACCESSORY ASSEMBLY	18506	18507	18508	18509	18510	18511	18512
	9/16"	SOCKET	18492	18493	18494	18495	18496	18497	18498
	14.29mm	JIFFY KEY 1/8 TORQUE	18303	18304	18305	18306	18307	18308	18309

TORQUE CONTROL INSTALLATION 5/32" / 3.97mm JIFFY KEY



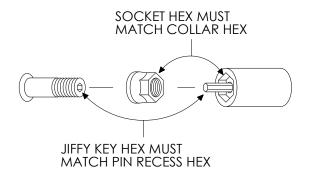

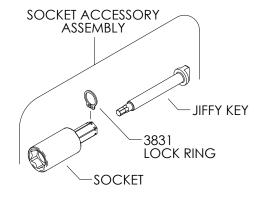



SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	1"	1 1/2"	2"	2 1/2"	3"
	7/14"	SOCKET ACCESSORY ASSEMBLY	18850	18851	18852	18853	18854	18855	18856
	7/16"	SOCKET	12872	12873	12874	12875	12876	12877	12878
	11.11mm	JIFFY KEY 5/32 TORQUE	18745	18746	18747	18748	18749	18750	18751
	1 /0"	SOCKET ACCESSORY ASSEMBLY	18857	18858	18859	18860	18861	18862	18863
	1/2"	SOCKET	18485	18486	18487	18488	18489	18490	18491
	12.7mm	JIFFY KEY 5/32 TORQUE	18745	18746	18747	18748	18749	18750	18751
	9/16"	SOCKET ACCESSORY ASSEMBLY	18864	18865	18866	18867	18868	18869	18870
	7/10 14.29mm	SOCKET	18492	18493	18494	18495	18496	18497	18498
5/32"	14.27111111	JIFFY KEY 5/32 TORQUE	18745	18746	18747	18748	18749	18750	18751
3.97mm									
3.7/11111	5/8"	SOCKET ACCESSORY ASSEMBLY	18871	18872	18873	18874	18875	18876	18877
	_	SOCKET	18710	18711	18712	18713	18714	18715	18716
	15.87mm	JIFFY KEY 5/32 TORQUE	18745	18746	18747	18748	18749	18750	18751
	11/16"	SOCKET ACCESSORY ASSEMBLY	18878	18879	18880	18881	18882	18883	18884
	17.46mm	SOCKET	18717	18718	18719	18720	18721	18722	18723
	17.4011111	JIFFY KEY 5/32 TORQUE	18745	18746	18747	18748	18749	18750	18751
	3/4"	SOCKET ACCESSORY ASSEMBLY	18885	18886	18887	18888	18889	18890	18891
	19.05mm	SOCKET	18724	18725	18726	18727	18728	18729	18730
	17.0311111	JIFFY KEY 5/32 TORQUE	18745	18746	18747	18748	18749	18750	18751

TORQUE CONTROL INSTALLATION 3/16" / 4.76mm JIFFY KEY



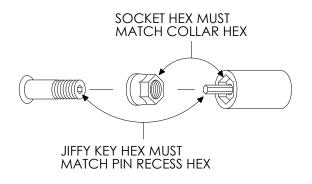

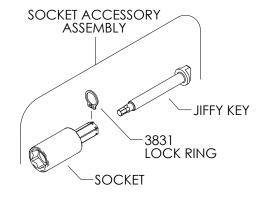


SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1/4"	1/2"	1"	1 1/2"	2"	2 1/2"	3"
	1 /0"	SOCKET ACCESSORY ASSEMBLY	18892	18893	18994	18995	18996	18997	18998
	1/2"	SOCKET		18486	18487	18488	18489	18490	18491
	12.7mm	JIFFY KEY 3/16 TORQUE	18752	18753	18754	18755	18756	18757	18758
	9/16"	SOCKET ACCESSORY ASSEMBLY	18899	18900	18901	18902	18903	18904	18905
		SOCKET	18492	18493	18494	18495	18496	18497	18498
	14.29mm	JIFFY KEY 3/16 TORQUE	18752	18753	18754	18755	18756	18757	18758
3/16"	E /0"	SOCKET ACCESSORY ASSEMBLY	18906	18907	18908	18909	18910	18911	18912
_	5/8"	SOCKET	18710	18711	18712	18713	18714	18715	18716
4.76mm	15.87mm	JIFFY KEY 3/16 TORQUE	18752	18753	18754	18755	18756	18757	18758
							•	•	
	11/1/"	SOCKET ACCESSORY ASSEMBLY	18913	18914	18915	18916	18917	18918	18919
	11/16"	SOCKET	18717	18718	18719	18720	18721	18722	18723
	17.46mm	JIFFY KEY 3/16 TORQUE	18752	18753	18754	18755	18756	18757	18758
	2 / 4"	SOCKET ACCESSORY ASSEMBLY	18920	18921	18922	18923	18924	18925	18926
	3/4"	SOCKET	18724	18725	18726	18727	18728	18729	18730
	19.05mm	JIFFY KEY 3/16 TORQUE	18752	18753	18754	18755	18756	18757	18758

10-31 in-lbs / 1.1-3.5 Nm




STRAIGHT INSTALLATION TOOL FOR TORQUE NUT APPLICATIONS 250 RPM

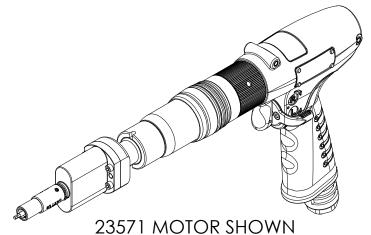

ATTACHMENT	TORQUE AT NOSE GEAR
21692	10-31 in-lbs


23571 MOTOR SHOWN WITH 21692 ATTACHMENT

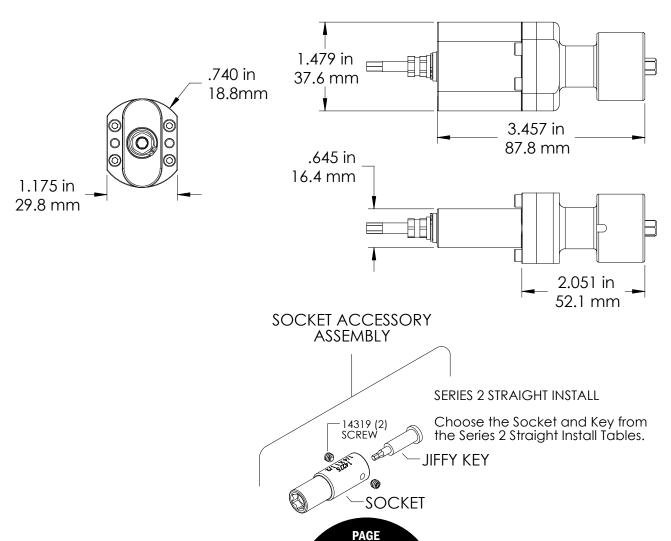

24-54 in-lbs / 2.7-6.1 Nm





STRAIGHT INSTALLATION TOOL FOR TORQUE NUT APPLICATIONS 250 RPM

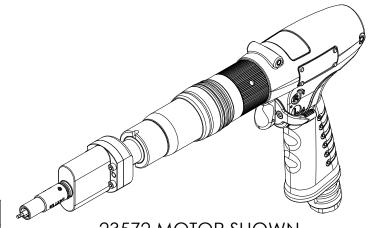

ATTACHMENT	TORQUE AT NOSE GEAR
21692	24-54 in-lbs

23572 MOTOR SHOWN WITH 21692 ATTACHMENT

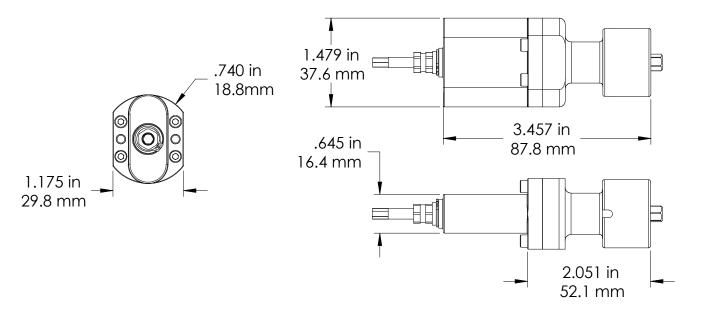


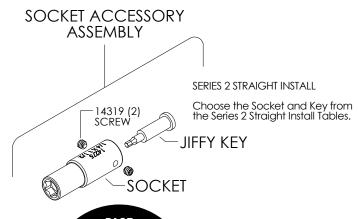


48-75 in-lbs / 5.4-8.5 Nm



STRAIGHT INSTALLATION TOOL FOR TORQUE NUT APPLICATIONS 310 RPM

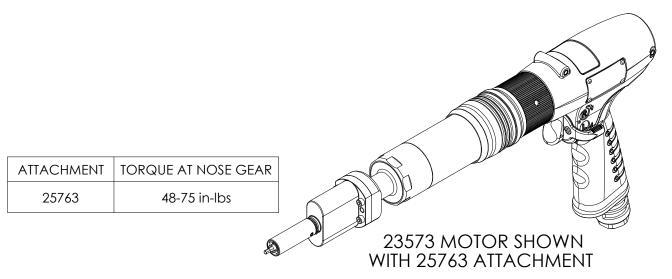


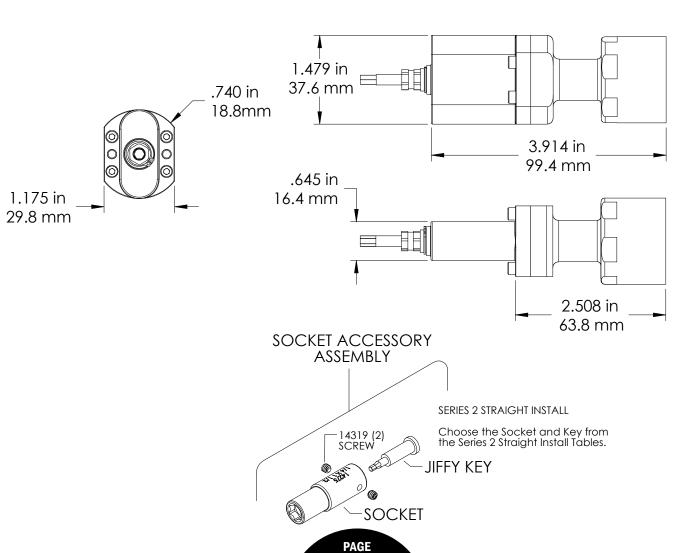


68-122 in-lbs / 7.7-13.8 Nm



STRAIGHT INSTALLATION TOOL FOR TORQUE NUT APPLICATIONS 220 RPM

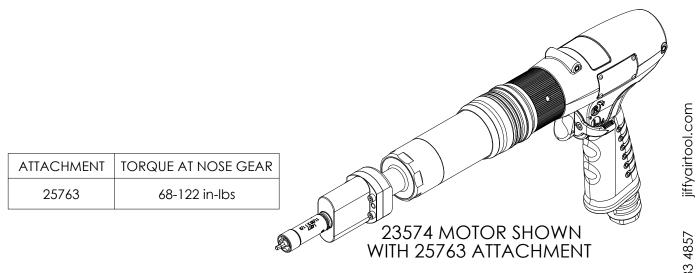


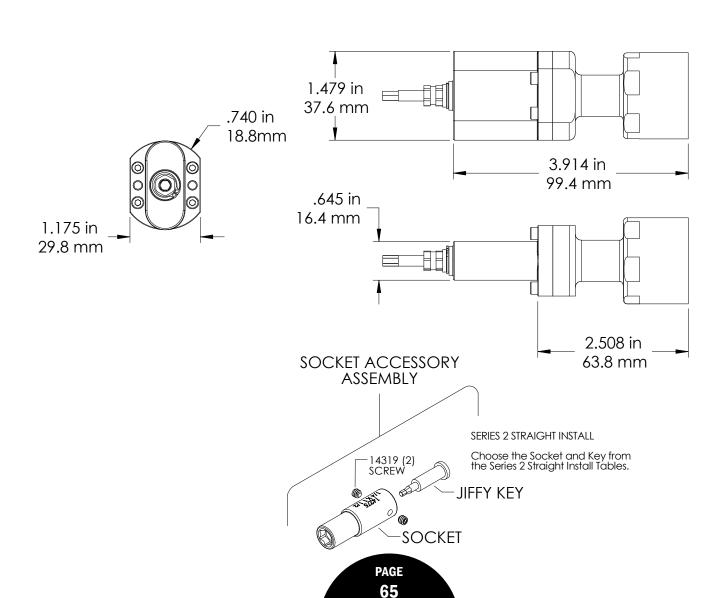

68-122 in-lbs / 7.7-13.8 Nm



STRAIGHT INSTALLATION TOOL FOR TORQUE NUT APPLICATIONS

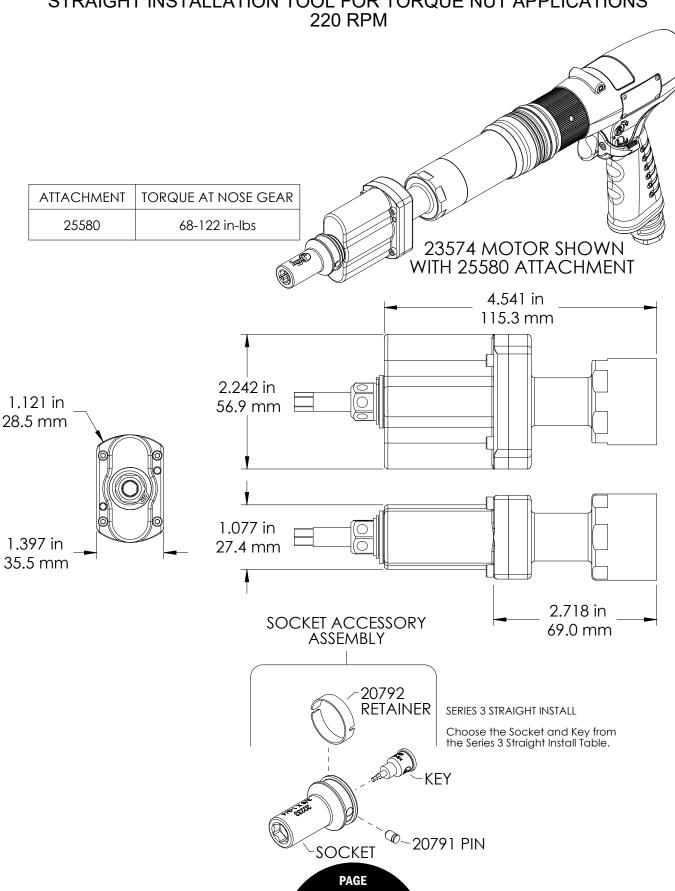


jiffyairtool.com

112-204 in-lbs / 12.7-23.0 Nm



jiffyairtool.com


STRAIGHT INSTALLATION TOOL FOR TORQUE NUT APPLICATIONS
160 RPM

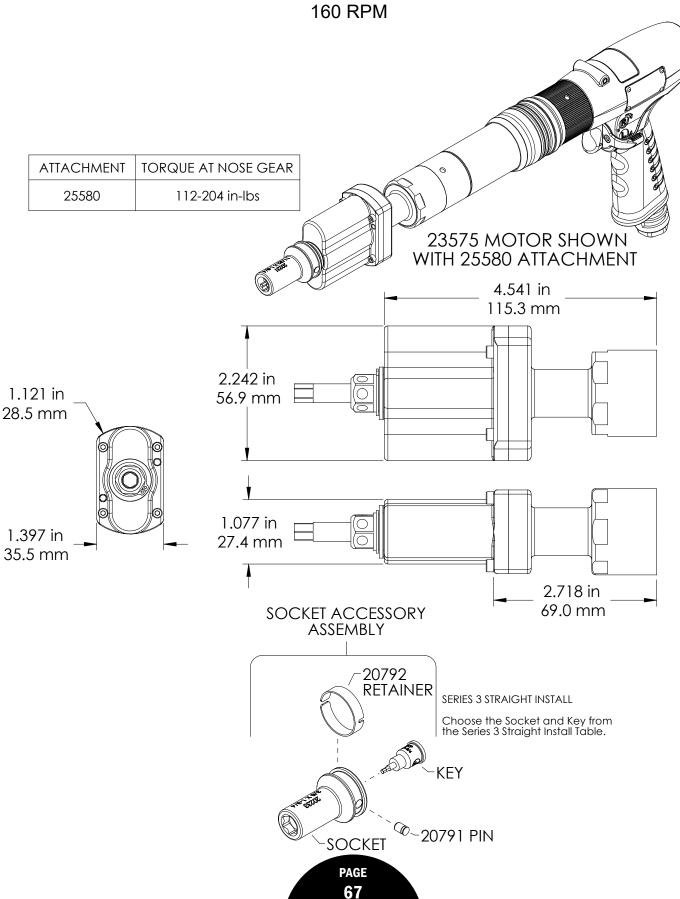


FITS SERIES 2 STRAIGHT ATTACHMENTS

TORQUE CONTROL INSTALLATION 1/16" / 1.59mm JIFFY KEY



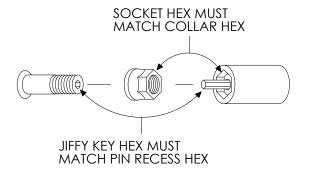

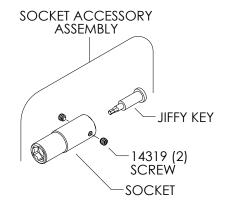


SEE PAGE 6 FOR SOCKET OPTIONS.


JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 1/2"	3"
	7/20"	SOCKET ACCESSORY ASSEMBLY	14339	14340
	7/32"	SOCKET	14274	14280
	5.56mm	JIFFY KEY 1/16 TORQUE	14373	14374
	1 / 4"	SOCKET ACCESSORY ASSEMBLY	14341	14342
	1/4"	SOCKET	14275	14281
	6.35mm	JIFFY KEY 1/16 TORQUE	14373	14374
1 /1 /"	9/32" 7.14mm	SOCKET ACCESSORY ASSEMBLY	14343	14344
1/16"		SOCKET	14276	14282
1.59mm		JIFFY KEY 1/16 TORQUE	14373	14374
	E /1 / "	SOCKET ACCESSORY ASSEMBLY	14345	14346
	5/16"	SOCKET	14217	14283
	7.93mm	JIFFY KEY 1/16 TORQUE	14373	14374
	11/20"	SOCKET ACCESSORY ASSEMBLY	14347	14348
	11/32"	SOCKET	14277	14284
	8.73mm	JIFFY KEY 1/16 TORQUE	14373	14374

FITS SERIES 2 STRAIGHT ATTACHMENTS

TORQUE CONTROL INSTALLATION 5/64" / 1.98mm JIFFY KEY



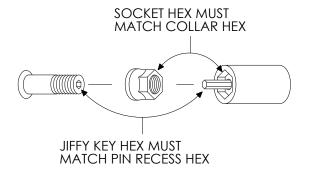

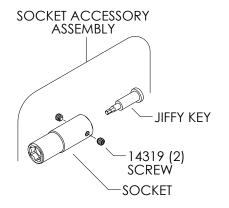


SEE PAGE 6 FOR SOCKET OPTIONS.


JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 1/2"	3"
5/64" 1.98mm	7/32" 5.56mm	SOCKET ACCESSORY ASSEMBLY	14349	14350
		SOCKET	14274	14280
		JIFFY KEY 5/64 TORQUE	14375	14376
	1/4" 6.35mm	SOCKET ACCESSORY ASSEMBLY	14351	14352
		SOCKET	14275	14281
		JIFFY KEY 5/64 TORQUE	14375	14376
	9/32" 7.14mm	SOCKET ACCESSORY ASSEMBLY	14353	14354
		SOCKET	14276	14282
		JIFFY KEY 5/64 TORQUE	14375	14376
	5/16" 7.93mm	SOCKET ACCESSORY ASSEMBLY	14355	14356
		SOCKET	14217	14283
		JIFFY KEY 5/64 TORQUE	14375	14376
	11/32 " 8.73mm	SOCKET ACCESSORY ASSEMBLY	14357	14358
		SOCKET	14277	14284
		JIFFY KEY 5/64 TORQUE	14375	14376
	3/8" 9.52mm	SOCKET ACCESSORY ASSEMBLY	14359	14360
		SOCKET	14278	14285
		JIFFY KEY 5/64 TORQUE	14375	14376

FITS SERIES 2 STRAIGHT ATTACHMENTS

TORQUE CONTROL INSTALLATION 3/32" / 2.38mm JIFFY KEY



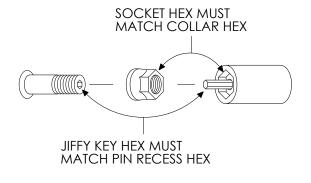

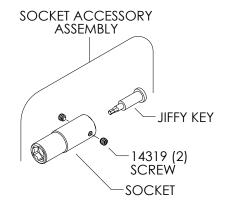



SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 1/2"	3"
3/32" 2.38mm	5/16" 7.93mm	SOCKET ACCESSORY ASSEMBLY	14361	14362
		SOCKET	14217	14283
		JIFFY KEY 3/32 TORQUE	14377	14378
	11/32 " 8.73mm	SOCKET ACCESSORY ASSEMBLY	14363	14364
		SOCKET	14277	14284
		JIFFY KEY 3/32 TORQUE	14377	14378
	3/8" 9.52mm	SOCKET ACCESSORY ASSEMBLY	14365	14366
		SOCKET	14278	14285
		JIFFY KEY 3/32 TORQUE	14377	14378
	7/16"	SOCKET ACCESSORY ASSEMBLY	14367	14368
		SOCKET	14279	14286
		JIFFY KEY 3/32 TORQUE	14377	14378





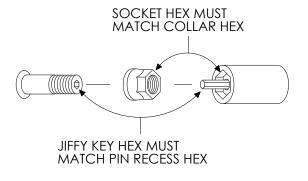

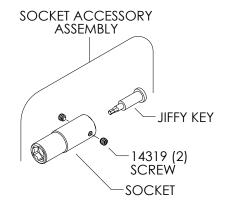


SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 1/2"	3"
	3/8" 9.52mm	SOCKET ACCESSORY ASSEMBLY	16004	16005
		SOCKET	14278	14285
		JIFFY KEY 1/8 TORQUE	16018	16019
				•
	7/16 "	SOCKET ACCESSORY ASSEMBLY	16006	16007
		SOCKET	14279	14286
1 /0!!		JIFFY KEY 1/8 TORQUE	16018	16019
1/8"				
3.17mm	1 /0"	SOCKET ACCESSORY ASSEMBLY	16008	16009
	1/2"	SOCKET 1601	16012	16013
	12.7mm	JIFFY KEY 1/8 TORQUE	16018	16019
	9/16"	SOCKET ACCESSORY ASSEMBLY	16010	16011
		SOCKET	16014	16015
	14.29mm	JIFFY KEY 1/8 TORQUE	16018	16019



TORQUE CONTROL INSTALLATION
1/16" / 1.59mm JIFFY KEY & 5/64" / 1.98mm JIFFY KEY

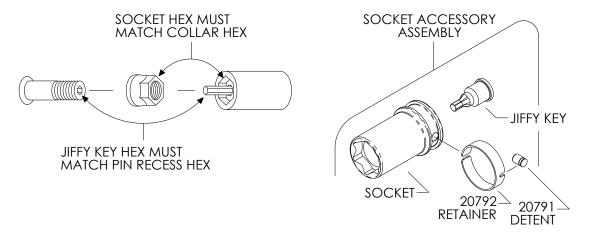


SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 3/4"	3 1/2"
1 /1 / "	5/16"	SOCKET ACCESSORY ASSEMBLY	20265	20266
		SOCKET	20229	20230
	7.93mm	JIFFY KEY 1/16 TORQUE	20323	20324
1/16"				
1.59mm	11/20"	SOCKET ACCESSORY ASSEMBLY	20267	20268
	11/32"	SOCKET	20231	20232
	8.73mm	JIFFY KEY 1/16 TORQUE	20323	20324

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 3/4"	3 1/2"
	5/16" 7.93mm	SOCKET ACCESSORY ASSEMBLY	20275	20276
		SOCKET	20229	20230
		JIFFY KEY 5/64 TORQUE	20325	20326
5/64" 1.98mm	11/32"	SOCKET ACCESSORY ASSEMBLY	20277	20278
		SOCKET	20231	20232
	8.73mm	JIFFY KEY 5/64 TORQUE	20325	20326
	2 /0!!	SOCKET ACCESSORY ASSEMBLY	20279	20280
	3/8"	SOCKET	20233	20234
	9.52mm	JIFFY KEY 5/64 TORQUE	20325	20326





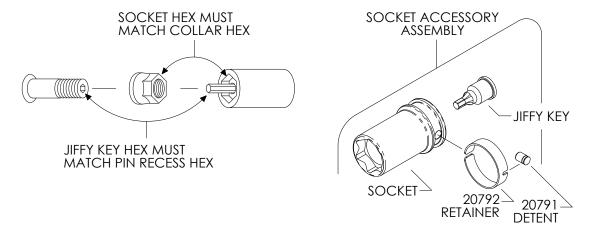


SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 3/4"	3 1/2"
	5/16"	SOCKET ACCESSORY ASSEMBLY	20281	20282
		SOCKET	20229	20230
	7.93mm	JIFFY KEY 3/32 TORQUE	20327	20328
	11/32 " 8.73mm	SOCKET ACCESSORY ASSEMBLY	20283	20284
		SOCKET	20231	20232
		JIFFY KEY 3/32 TORQUE	20327	20328
3/32" 2.38mm	3/8" 9.52mm	SOCKET ACCESSORY ASSEMBLY	20285	20286
		SOCKET	20233	20234
		JIFFY KEY 3/32 TORQUE	20327	20328
	7/16 "	SOCKET ACCESSORY ASSEMBLY	20287	20288
		SOCKET	20235	20236
		JIFFY KEY 3/32 TORQUE	20327	20328
	1/2" 12.7mm	SOCKET ACCESSORY ASSEMBLY	20289	20290
		SOCKET	20237	20238
		JIFFY KEY 3/32 TORQUE	20327	20328



TORQUE CONTROL INSTALLATION 1/8" / 3.17mm JIFFY KEY

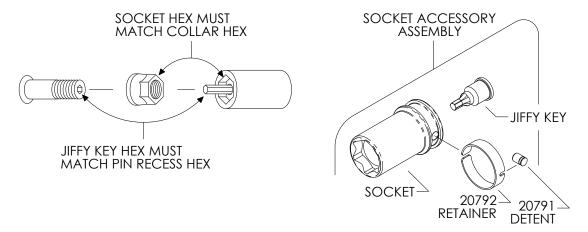


SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 3/4"	3 1/2"
	3/8" 9.52mm	SOCKET ACCESSORY ASSEMBLY	20291	20292
		SOCKET	20233	20234
		JIFFY KEY 1/8 TORQUE	20329	20330
	7/16"	SOCKET ACCESSORY ASSEMBLY	20293	20294
		SOCKET	20235	20236
1/8"		JIFFY KEY 1/8 TORQUE	20329	20330
_				
3.17mm	1 /0"	SOCKET ACCESSORY ASSEMBLY	20295	20296
	1/2"	SOCKET	20237 2	20238
	12.7mm	JIFFY KEY 1/8 TORQUE	20329	20330
	9/16" 14.29mm	SOCKET ACCESSORY ASSEMBLY	20297	20298
		SOCKET	20239	20240
		JIFFY KEY 1/8 TORQUE	20329	20330





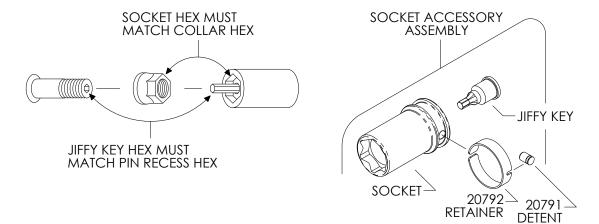


SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 3/4"	3 1/2"
	2 /0"	SOCKET ACCESSORY ASSEMBLY	20299	20300
	3/8"	SOCKET	20233	20234
	9.52mm	JIFFY KEY 5/32 TORQUE	20331	20332
		SOCKET ACCESSORY ASSEMBLY	20301	20202
	7/16"			20302
	11,11mm	SOCKET	20235	20236
		JIFFY KEY 5/32 TORQUE	20331	20332
	1 /0!!	SOCKET ACCESSORY ASSEMBLY	20303	20304
	1/2"	SOCKET	20237	20238
	12.7mm	JIFFY KEY 5/32 TORQUE	20331	20332
5/32"	9/16"	SOCKET ACCESSORY ASSEMBLY	20305	20306
3.97mm		SOCKET	20239	20240
3.7/111111	14.29mm	JIFFY KEY 5/32 TORQUE	20331	20332
	- /0!!	SOCKET ACCESSORY ASSEMBLY	20307	20308
	5/8"	SOCKET	20241	20242
	15.87mm	JIFFY KEY 5/32 TORQUE	20331	20332
	11/16"	SOCKET ACCESSORY ASSEMBLY	20309	20310
		SOCKET	20243	20244
	17.46mm	JIFFY KEY 5/32 TORQUE	20331	20332
	3/4" 19.05mm	SOCKET ACCESSORY ASSEMBLY	20311	20312
		SOCKET	20245	20246
		JIFFY KEY 5/32 TORQUE	20331	20332





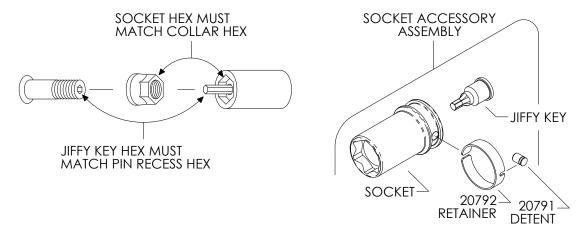


SEE PAGE 6 FOR SOCKET OPTIONS.

JIFFY KEY HEX	SOCKET HEX	DESCRIPTION	1 3/4"	3 1/2"
	1/2" 12.7mm	SOCKET ACCESSORY ASSEMBLY	20313	20314
		SOCKET	20237	20238
		JIFFY KEY 5/32 TORQUE	20333	20334
	0/1/11	SOCKET ACCESSORY ASSEMBLY	20315	20316
	9/16"	SOCKET	20239	20240
	14.29mm	JIFFY KEY 5/32 TORQUE	20333	20334
3/16"	5/8" 15.87mm	SOCKET ACCESSORY ASSEMBLY	20317	20318
		SOCKET	20241	20242
4.76mm		JIFFY KEY 5/32 TORQUE	20333	20334
	11/1/	SOCKET ACCESSORY ASSEMBLY	20319	20320
	11/16" 17.46mm	SOCKET	20243	20244
		JIFFY KEY 5/32 TORQUE	20333	20334
		•		
	3/4" 19.05mm	SOCKET ACCESSORY ASSEMBLY	20321	20322
		SOCKET	20245	20246
		JIFFY KEY 5/32 TORQUE	20333	20334




Straight Torque Control Motors used with Attachments (Small Castle)

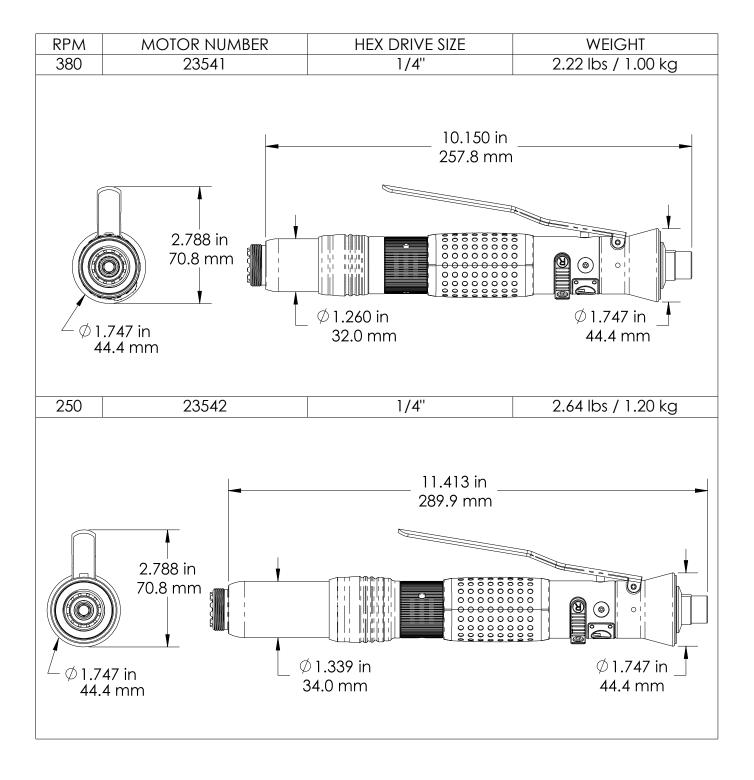




Straight Torque Control Motors used with Attachments (Big Castle)

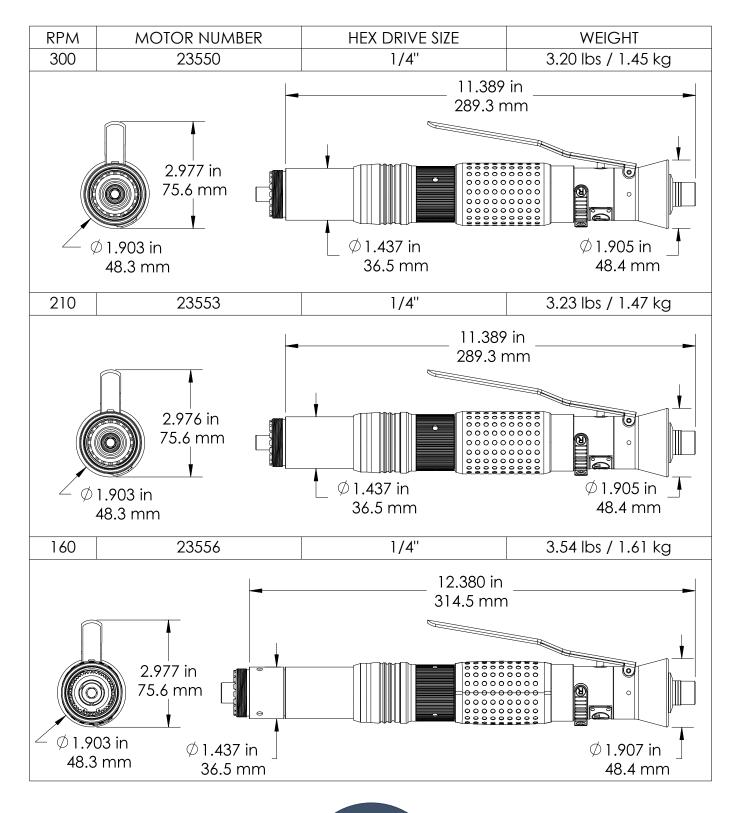




Pistol Torque Control Motors used with Attachments (Small Castle)

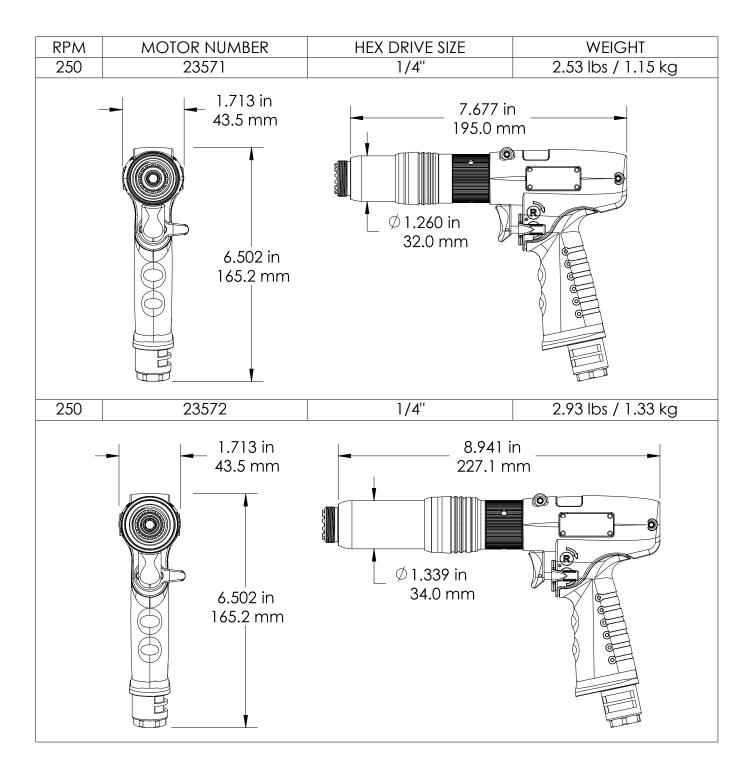




Pistol Torque Control Motors used with Attachments (Big Castle)

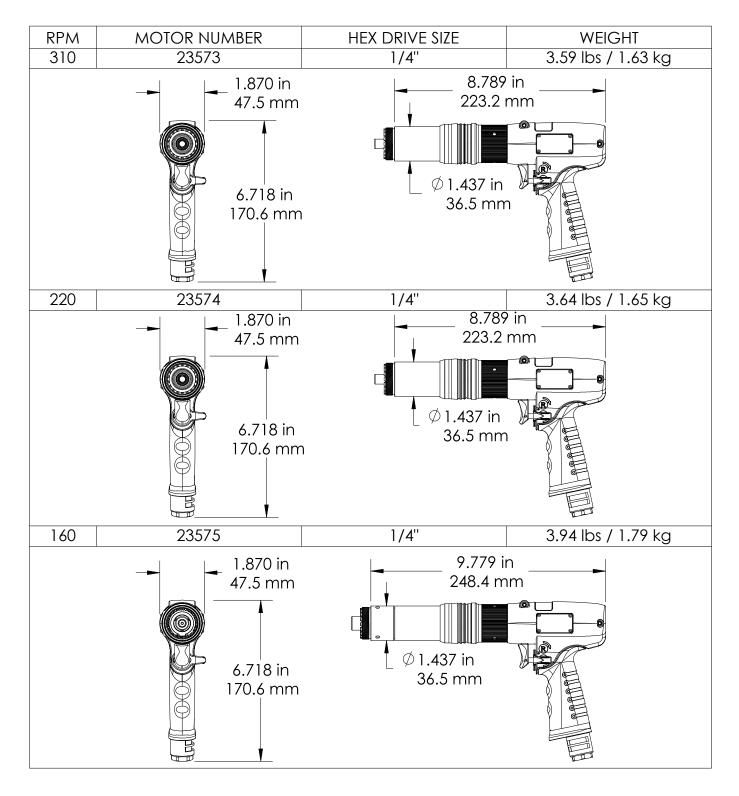




Auto Shut-Off Pistol Torque Control Screw Driver used without Attachments

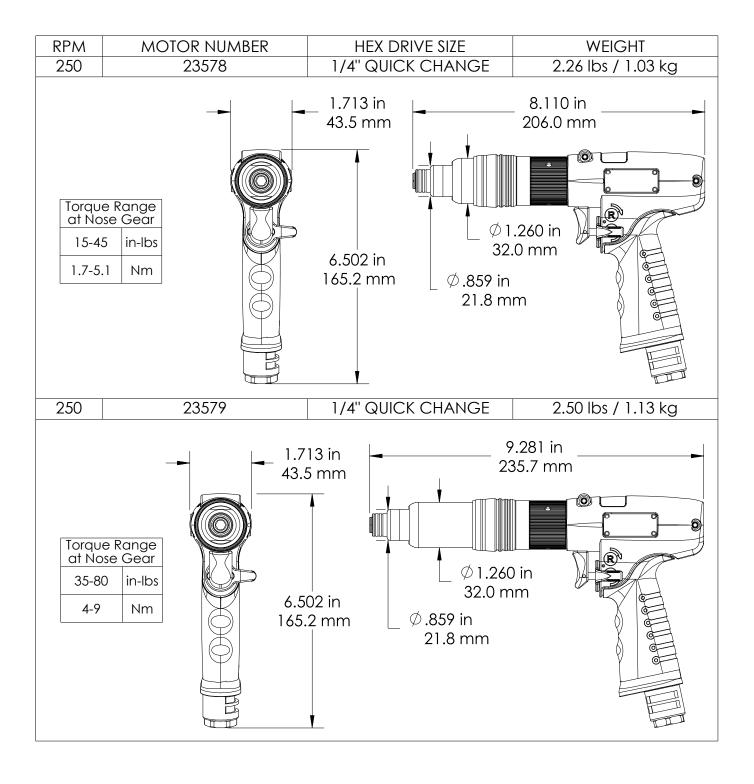



Straight Torque Control Angle Nutrunners used without Attachments

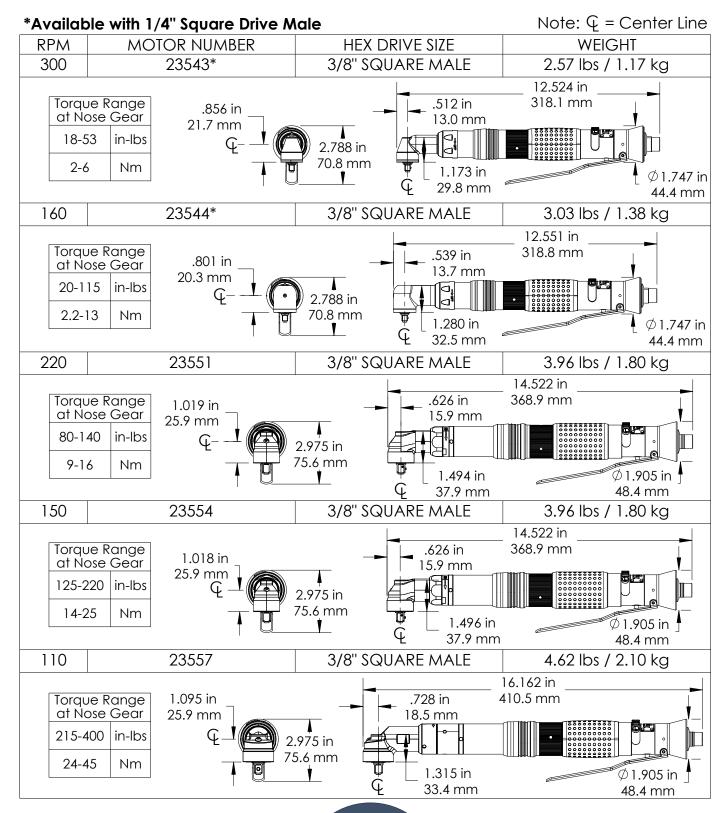



WARNING:

TORQUE CONTROL TOOLS ARE PRESET AT THE FACTORY TO THE CUSTOMERS TORQUE SPECIFICATION.

REMOVAL OF ATTACHMENT OR ADJUSTMENT OF CLUTCH REQUIRES RE-VERIFICATION!




INSTRUCTIONS:

- I. DISCONNECT TOOL FROM AIR SUPPLY.
- 2. SLIDE ADJUSTMENT COVER FORWARD FOR ACCESS TO ADJUSTMENT SLOT.
- 3. ROTATE MOTOR UNTIL THE U-SHAPED TOOL RECESS IS WITHIN VIEW OF THE WINDOW. INSERT INCLUDED ADJUSTMENT TOOL INTO SLOT. - WARNING: DO NOT USE SIMILARLY SHAPED TOOLS TO REPLICATE THE ADJUSTMENT TOOL.
- 4. TURN COUNTER-CLOCKWISE TO INCREASE TORQUE SHUTOFF LIMIT.
- 5. VERIFY OUTPUT TORQUE WITH AN APPROPRIATE TORQUE TRANSDUCER. IF THE MOTOR USES AN ATTACHMENT, VERIFY TORQUE AT THE NOSE GEAR OF THE ATTACHMENT.



ACCESSORIES

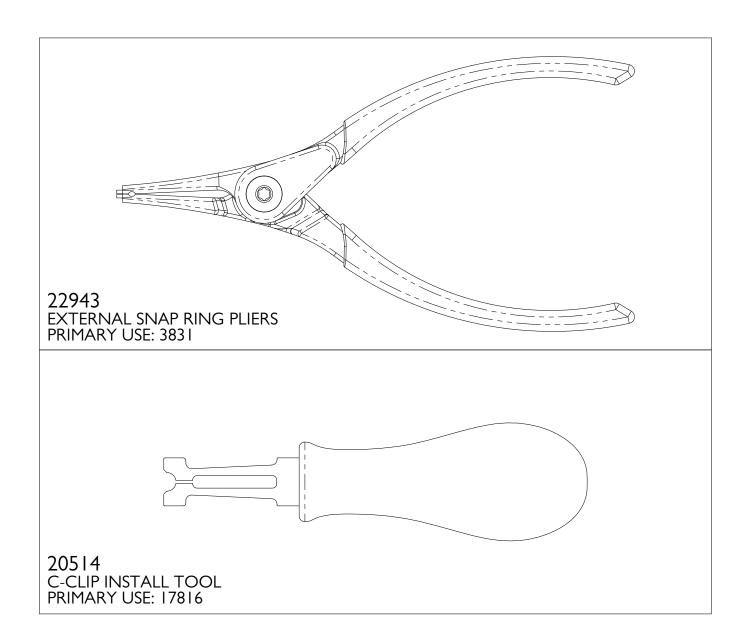



LUBRICATION INSTRUCTIONS

AIR SUPPLY

Our tools are designed to operate at 90 pounds per square inch air pressure. The pressure should be checked at the tools inlet with the tool running. For maximum performance use a 1/4" inside diameter air hose up to 8 foot in length. If additional length is required a 3/8" or larger inside diameter should be connected to the 1/4" inside diameter hose.

All hoses should be clear of dirt and moisture.

AIR LINE LUBRICATION

An automatic in-line filter-lubricator is recommended as it increases tool life and provides needed lubrication for tools in sustained operation. The in-line lubricator should be regularly checked and filled with a good grade of 10 weight machine oil. Proper adjustment of the in-line lubricator is performed by placing a sheet of paper next to the exhaust ports of the tool and holding the throttle open for approximately one minute. The lubricator is set correctly when a very light stain of oil collects on the paper. Excessive amounts of oil should be avoided. In the event that it becomes necessary to store the tool for an extended amount of time it should receive a generous amount of lubrication at that time and again when returned to service. The tool should be stored in a clean and dry environment. Care should be taken to absorb any excess oil from the exhaust with a suitable cloth or rag when the tool is first run with air after storage.

GEAR TRAIN LUBRICATION

Application of the tool should govern how frequently it is greased. It is recommended that the gear cases receive several squirts of Magnalube G grease after forty hours of operation. info@magnalube.com

ATTACHMENT LUBRICATION

The attachments should be greased once a dayif used in sustained operation. Failure to lubricate attachments will cause premature wear and short attachment life. The grease gun used should fit a miniature grease fitting. Attachments use Magnalube G grease info@magnalube.com



IMPORTANT SAFETY INFORMATION.
READ ALL MATERIAL BEFORE OPERATING TOOL AND KEEP SAFELY FOR FUTURE REFERENCE.
IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PLACE THE INFORMATION INCLUDED WITH TOOL INTO THE HANDS OF THE OPERATOR.

FAILURE TO OBSERVE THE FOLLOWING WARNINGS COULD RESULT IN INJURY.

PLACING TOOL IN SERVICE

- Always operate, inspect and maintain this tool in accordance with all regulations (local, state, federal and country) that may apply to hand held / hand operated pneumatic tools.
- For safety, top performance, and maximum durability of parts, operate this tool at 90 psig (6.2 bar/620 kPa) maximum air pressure at theinlet with 1/4" (6mm) inside diameter air supply hose.
- Always turn off the air supply and disconnect the air supply hose before installing, removing, adjusting any accessory, socket, or cutter on this tool, or before performing any maintenance on this tool.
- Do not use damaged, frayed, or deteriorated air hoses or fittings.
- Be sure all hoses and fittings are the correct size and are tightly secured.
- Always use clean, dry air at 90 psig maximum air pressure. Dust, corrosive fumes, and/or excessive moisture can ruin the motor of an air tool.
- Do not lubricate tool with flammable or volatile liquids such as kerosene, diesel, or jet fuel.
- Do not remove any labels. Replace any damaged label.

USING THE TOOL

- Always wear eye protection when operating or performing maintenance on this tool.
- Always wear hearing protection when operating this tool.
- Keep hands, loose clothing, and long hair away from rotating end of tool.
- Anticipate and be alert for sudden changes in motion during start up and operation of any power tool.
- Keep body stance balanced and firm. Do not overreach when operating this tool. High reaction torques can occur at or below the recommended air pressure.
- Cutter or socket may continue to rotate briefly after throttle is released.
- Air power tools can vibrate in use. Vibration, repetitive motions or uncomfortable positions may be harmful to your hands and arms. Stop using any tool if discomfort, tingling feeling or pain occurs. Seek medical advice before resuming use.
- Use only approved cutters, sockets, and accessories.
- This tool is not designed for work in explosive atmospheres.
- This tool is not insulated against electric shock.

NOTICE

The use of any parts other than genuine Jiffy Air Tool replacement parts may result in safety hazards, decrease tool performance, increase maintenance, and invalidate all warranties.

Jiffy Air Tool, Inc. is not responsible for any customer modifications to products.









SERVICE POLICY

FULL SIX MONTH WARRANTY

Jiffy warrants its products against any defects that are due to faulty material or workmanship for a six month period after the original date of customer purchase. This warranty does not include damage to the product resulting from accident, misuse, or repairs performed by unauthorized personnel. If the product should become defective within the warranty period, or you have questions regarding warranty or service, call Customer Service.

RETURN PROCEDURE

- 1. When you wish to send any product to the factory, for any reason, contact the sales department. Sales personnel will record all pertinent information.
- 2. Upon approval, the sales department will issue a Return Material Authorization number, or RMA number to cover the "return" or "repair" specifed.
- 3. The RMA number must be prominently displayed upon all packages returned to our facility. Failure to do so will result in the package being refused and returned at the shippers expense.

Restocking or Cancellation fee 50%

Jiffy Air Tool USA 2254 Conestoga Dr.

Carson City, NV 89706-0434

Phone: 1 (775) 883 1072 or (800) 828 8665

Fax: 1 (775) 883 4857

email: sales@jiffyairtool.com

Order Desk Hours: 7:00 a.m. to 3:30 p.m. PST

Monday through Friday

Jiffy Air Tool, Europe Unit 8 Lane End Industrial Park High Wycombe, Bucks HP143BY UK

Phone: +49 163 255 48 69 email: derya@jiffyairtool.com

CATALOG 2021

www.jiffyairtool.com

